

# User's Manual

HK654070XB 24" Electric Cooktop -  
User's Manual



 **AEG**

perfekt in form und funktion

## FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler – features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

## ACCESSORIES AND CONSUMABLES

In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags...



Visit the webshop at:  
[www.aeg.com/shop](http://www.aeg.com/shop)

# CONTENTS

- 4 Safety information
- 5 Installation instructions
- 7 Product description
- 8 Operating instructions
- 12 Helpful hints and tips
- 13 Care and cleaning
- 14 What to do if...
- 15 Environment concerns
- 15 Warranty

The following symbols are used in this user manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

Subject to change without notice



## SAFETY INFORMATION



For your safety and correct operation of the appliance, read this manual carefully before the installation and use. Always keep these instructions with the appliance also if you move or sell it. The users must fully know the operation and safety functions of the appliance.

### Children and vulnerable people safety



#### **WARNING!**

Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge to use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.

- Keep all packaging away from children. There is the risk of suffocation or injury.
- Keep the children away from the appliance during and after the operation, until the appliance is cold.



#### **WARNING!**

Activate the child safety device to prevent small children and pets from an accidental activation of the appliance.

### Safety during operation

- Remove all packaging, stickers and layers from the appliance before the first use.
- Set the cooking zones to "off" after each use.
- The Risk of burns! Do not put cutlery or saucepan lids on the surface that you cook, as they can become hot.



#### **WARNING!**

Fire risk! Too hot fats and oils can occur with ignition very quickly.

### Correct operation

- Always monitor the appliance during operation.
- The appliance is only for domestic use!
- Do not use the appliance as a work or a storage surface.
- Do not put or keep very flammable liquids and materials, easy fusible objects (made of plastic or aluminium) on or near the appliance.
- Be careful when you connect the appliance to the near sockets. Do not let the electricity bonds touch the appliance or hot cookware. Do not let the electricity bonds to tangle.

### How to prevent a damage to the appliance

- If the objects or cookware fall on the glass ceramic, the surface can be damaged.
- Cookware made of cast iron, cast aluminium or with damaged bottoms can cause scratch of the glass ceramic. Do not move them on the surface.
- Do not let cookware boil dry to prevent the damage to cookware and glass.
- Do not use the cooking zones with empty cookware or without cookware.

- Do not put the aluminium foil on the appliance.





### WARNING!

If there is a crack on the surface, disconnect power supply to prevent the electrical shock.

## INSTALLATION INSTRUCTIONS



Before the installation, note down the serial number (Ser. Nr.) from the rating plate. The rating plate of the appliance is on its lower casing.

Modell HK654070XB	Prod.Nr. 949 595 011 00
Typ 58 HAD 56 AO	220-240 V 50-60-Hz
Made in Germany	Ser.Nr. .... 17,1 kW
AEG	CE  

## The Safety Instructions



### WARNING!

You must read these!

- Make sure that the appliance is not damaged because of transportation. Do not connect a damaged appliance. If it is necessary, speak to the supplier.
- Only an authorized servicing technician can install, connect or repair this appliance. Use only original spare parts.
- Only use the built-in appliances after you assemble the appliance into correct built-in units and work surfaces that align to the standards.
- Do not change the specifications or change this product. Risk of injury and damage to the appliance.
- Fully obey the laws, ordinances, directives and standards in force in the country where you use the appliance (safety regulations, recycling regulations, electrical safety rules etc.)!
- Keep the minimum distances to other appliances and units!
- Install shock protection, for example install the drawers only with a protective floor directly below the appliance!
- Keep safe the cut surfaces of the worktop from moisture with a correct sealant!
- Seal the appliance to the work top with no space between with a correct sealant!
- Keep safe the bottom of the appliance from steam and moisture, e.g. from a dishwasher or oven!
- Do not install the appliance adjacent to doors and below windows! If not, when you open the doors or windows they can push off hot cookware from the appliance.



### WARNING!

Risk of injury from electrical current. Carefully obey the instructions for electrical connections.

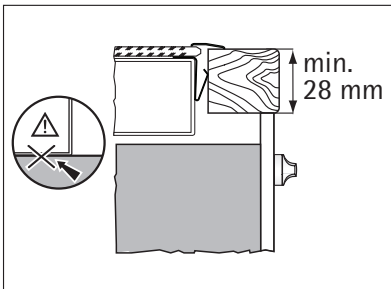
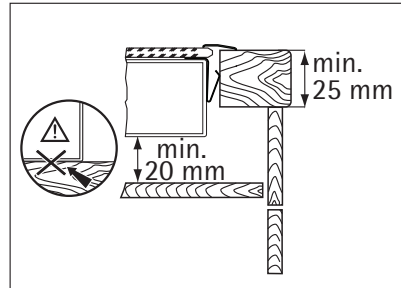
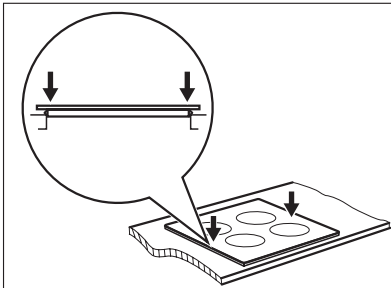
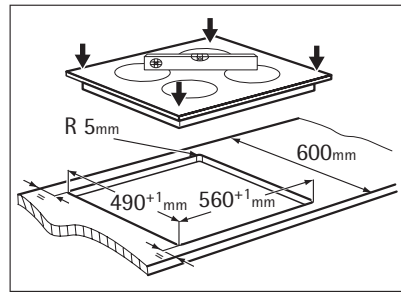
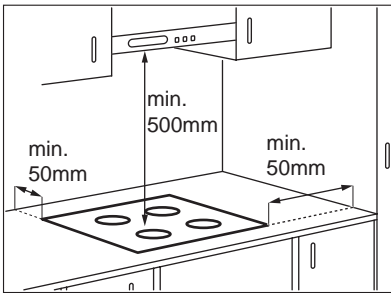
- The electrical mains terminal is live.
- Make electrical mains terminal free of voltage.

- Install correctly to give shock protection.
- Loose and incorrect plug and socket connections can make the terminal become too hot.
- A qualified electrician must install the connections in the clamps correctly.
- Use a strain relief clamp on cable.
- Use the correct mains cable of type H05BB-F Tmax 90°C (or higher) for a single phase or two phase connection.
- Replace the damaged mains cable with a special cable (type H05BB-F Tmax 90°C; or higher). Speak your local Service Centre.

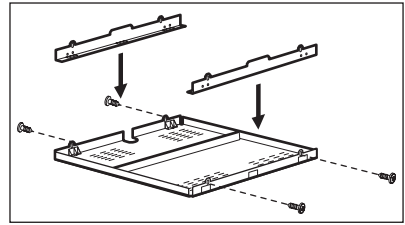
The appliance must have the electrical installation which lets you disconnect the appliance from the mains at all poles with a contact opening width of minimum 3 mm.

You must have correct devices to isolate: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.

## Assembly

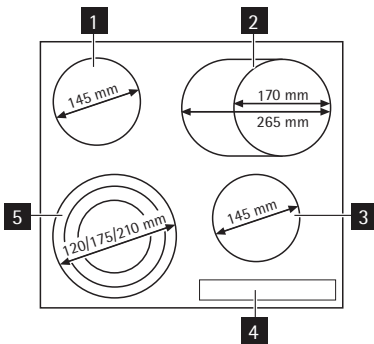


**i** If you use a protection box (the additional accessory), the protective floor directly below the appliance is not necessary.



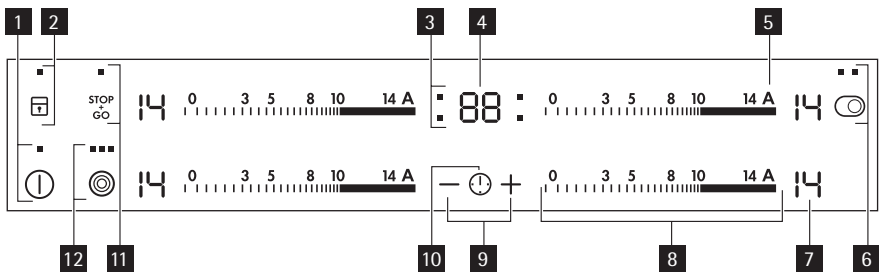
## PRODUCT DESCRIPTION

### General overview





 

- 1** Single cooking zone 1200 W
- 2** Oval zone 1500/2400 W
- 3** Single cooking zone 1200 W
- 4** Control panel
- 5** Triple cooking zone 800/1600/2300 W

### Control panel layout





 





Use the sensor fields to operate the appliance. The displays, indicators and sounds tell which functions operate.

	sensor field	function
<b>1</b>	ⓐ	It activates and deactivates the appliance.
<b>2</b>	🔒	It locks/unlocks the control panel.
<b>3</b>	Cooking zones' indicators of timer	It shows for which zone you set the time.
<b>4</b>	The timer display	It shows the time in minutes.

	sensor field	function
5	A	It activates Automatic Heat Up function.
6		It activates and deactivates the outer ring.
7	A heat setting display	It shows the heat setting.
8	A control bar	To set the heat setting.
9	+ / -	It increases or decreases the time.
10		It sets the cooking zone.
11		It activates and deactivates the STOP+GO function.
12		It activates and deactivates the outer ring .

 
## Heat setting displays

Display	Description
	The cooking zone is deactivated.
	The cooking zone operates.
	The <sup>STOP</sup> / <sub>GO</sub> function operates.
	The Automatic Heat Up function operates
	There is a malfunction.
	OptiHeat Control (3 step Residual heat indicator) : continue cook / stay warm / residual heat.
	Lock/The Child Safety function operates.
	The Automatic Switch Of function operates.

## OptiHeat Control (3 step Residual heat indicator)




### WARNING!

 The risk of burns from residual heat!

OptiHeat Control shows the level of the residual heat.


## OPERATING INSTRUCTIONS

### Activation and deactivation


Touch  for 1 second to activate or deactivate the appliance.

### Automatic Switch Off










The function deactivates the appliance automatically if:

- All cooking zones are deactivated (.
- You do not set the heat setting after you activate the appliance.



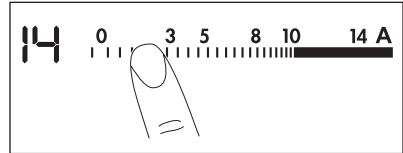
- You spill something or put something on the control panel for more than 10 seconds, (a pan, a cloth, etc.). The sound operates some time and the appliance deactivates. Remove the object or clean the control panel.
- You do not deactivate a cooking zone or change the heat setting. After some time,  comes on and the appliance deactivates. See the table.

The times of Automatic Switch Off

 
 
The heat setting	 ,  -  3	 -  7	 -  9	 10 -  14
The cooking zone deactivates after	6 hours	5 hours	4 hours	1.5 hours

## The heat setting

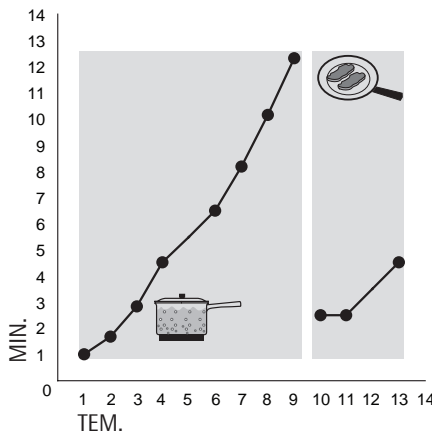
Touch the control bar at the heat setting. Change to the left or the right, if it is necessary. Do not release before you have a correct heat setting. The display shows the heat setting.



## Activation and deactivation of the outer rings


You can adjust the surface you cook to the dimension of the cookware. To activate the outer ring touch the sensor field  / . The indicator comes on. For more outer rings touch the same sensor field again. The subsequent indicator comes on. Do the procedure again to deactivate the outer ring. The indicator goes out.


## Automatic Heat Up



You can get a necessary heat setting in a shorter time if you activate the Automatic Heat Up function. This function sets the highest heat setting for some time (see the illustration), and then decreases to the necessary heat setting.

To start the Automatic Heat Up function for a cooking zone:

1. Touch **A** ( comes on in the display).

2. Immediately touch the necessary heat setting. After 3 seconds  comes on in the display.

To stop the function change the heat setting.




 




 




## Timer


### Count Down Timer


Use the Count Down Timer to set how long the cooking zone operates for only this one time.

Set the Count Down Timer after the selection of the cooking zone.

You can set the heat setting before or after you set the timer.




 

 


- To set the cooking zone: touch  again and again until the indicator of a necessary cooking zone comes on.
- To activate the Count Down Timer: touch  of the timer to set the time (  -  minutes). When the indicator of the cooking zone start to flash slow, the time counts down.
- To see the remaining time: set the cooking zone with . The indicator of the cooking zone starts to quickly. The display shows the remaining time.
- To change the Count Down Timer: set the cooking zone with  touch  or .
- To deactivate the timer: set the cooking zone with . Touch . The remaining time counts back to . The indicator of the cooking zone goes out. To deactivate you can also touch  and  at the same time.

When the countdown comes to an end, the sound operates and  flashes. The cooking zone deactivates.





- To stop the sound: touch 


### CountUp Timer ( The count up timer)

Use the CountUp Timer to monitor how long the cooking zone operates.



- To set the cooking zone (if more than 1 cooking zone operate): touch  again and again until the indicator of a necessary cooking zone comes on.
- To activate the CountUp Timer: touch  of the timer  comes on. When the indicator of the cooking zone starts to flash slow, the time counts up. The display switches between  and counted time (minutes).
- To see how long the cooking zone operates: set the cooking zone with . The indicator of the cooking zone starts to flash quickly. The display shows the time that the cooking zone operates.
- To deactivate the CountUp Timer: set the cooking zone with  and touch  or  to deactivate the timer. The indicator of the cooking zone goes out.


### Minute Minder


You can use the timer as a Minute Minder while the cooking zones do not operate. Touch . Touch  or  of the timer to set the time. When the time comes to an end, the sound operates and  flashes.

 

 
- To stop the sound: touch 

## STOP+GO


The  function sets all cooking zones that operate to the lowest heat setting (  ).

When  operates, you cannot change the heat setting.

 

The  function does not stop the timer function.

- To activate this function touch  . The symbol  comes on.
- To deactivate this function touch  . The heat setting that you set before comes on.

## Lock

When the cooking zones operate, you can lock the control panel, but not  . It prevents an accidental change of the heat setting.

First set the heat setting.

To start this function touch  . The symbol  comes on for 4 seconds.

The Timer stays on.

 
 
 

To stop this function touch  . The heat setting that you set before comes on.

When you stop the appliance, you also stop this function.



 

## The child safety device

This function prevents an accidental operation of the appliance.


 


To activate the child safety device

- Activate the appliance with  . Do not set the heat settings.
- Touch  for 4 seconds. The symbol  comes on.
- Deactivate the appliance with  .

To deactivate the child safety device

- Activate the appliance with  . Do not set the heat settings. Touch  for 4 seconds. The symbol  comes on.
- Deactivate the appliance with  .

 
 



To override the child safety device for only one cooking time

- Activate the appliance with  . The symbol  comes on.
- Touch  for 4 seconds. Set the heat setting in 10 seconds. You can operate the appliance.
- When you deactivate the appliance with  , the child safety device operates again.


## OffSound Control (Deactivation and activation of the sounds)

Deactivation of the sounds

Deactivate the appliance.






Touch  for 3 seconds. The displays come on and go out. Touch  for 3 seconds.  comes on, the sound is on. Touch  ,  comes on, the sound is off.

When this function operates, you can hear the sounds only when:

- you touch 
- the Minute Minder comes down
- the Count Down Timer comes down
- you put something on the control panel.

Activation of the sounds

Deactivate the appliance.

Touch  for 3 seconds. The displays come on and go out. Touch  for 3 seconds.  comes on, because the sound is off. Touch  ,  comes on. The sound is on.

## HELPFUL HINTS AND TIPS

### Cookware



- The bottom of the cookware must be as thick and flat as possible.
- Cookware made of enamelled steel and with aluminium or copper bottoms can cause the colour change on the glass-ceramic surface.

### Energy saving



- If it is possible, always put the lids on the cookware.
- Put cookware on a cooking zone before you start it.
- Stop the cooking zones before the end of the cooking time to use residual heat.
- The bottom of pans and cooking zones must have the same dimension.


### Öko Timer (Eco Timer)



To save the energy, the heater of the cooking zone deactivates before the count down timer signal. The difference in the operation time is depends of the heat setting level and the time you cook.

### The examples of cooking applications

The data in the table is for guidance only.

Heat setting	Use to:	Time	Hints
 1	Keep cooked foods warm	as necessary	Put a lid on a cookware.
1-3	Hollandaise sauce, melt: butter, chocolate, gelatine	5-25 min	Mix from time to time.
1-3	Solidify: fluffy omelettes, baked eggs	10-40 min	Cook with a lid on.
3-5	Simmer rice and milkbased dishes, heating up ready-cooked meals	25-50 min	Add the minimum two times as much liquid as rice, mix milk dishes at some point of the procedure through.
5-7	Steam vegetables, fish, meat	20-45 min	Add some tablespoons of liquid.
7-9	Steam potatoes	20-60 min	Use max. ¼ l water for 750 g of potatoes.

Heat setting	Use to:	Time	Hints
7-9	Cook larger quantities of food, stews and soups	60-150 min	Up to 3 l liquid plus ingredients.
9-12	Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts	as necessary	Turn halfway through.
12-13	Heavy fry, hash browns, loin steaks, steaks	5-15 min	Turn halfway through.
14	Boil large quantities of water, cook pasta, sear meat (goulash, pot roast), deep fry chips.		

## Information on acrylamides

**Important!** According to the newest scientific knowledge, if you brown food (specially the one which contains starch), acrylamides can pose a health risk. Thus, we recommend that you cook at the lowest temperatures and do not brown food too much.

## CARE AND CLEANING

Clean the appliance after each use.  
Always use cookware with clean bottom.



### WARNING!

The sharp objects and abrasive cleaning agents can cause damage to the appliance. For your safety, do not clean the appliance with steam cleaners or high-pressure cleaners.



 



Scratches or dark stains on the glass-ceramic cause no effect on how the appliance operates.

To remove the dirt:


- **Remove immediately:** melted plastic, plastic foil, and food with sugar. If not, the dirt can cause damage to the appliance. Use a special scraper for the glass. Put the scraper on the glass surface at an acute angle and move the blade on the surface.
  - **Remove after the appliance is sufficiently cool:** limescale rings, water rings, fat stains, shiny metallic discolorations. Use a special cleaning agent for glass ceramic or stainless steel.
2. Clean the appliance with a moist cloth and some detergent.
3. At the end rub the appliance dry with a clean cloth.

## WHAT TO DO IF...

Problem	Possible cause and remedy
You cannot activate the appliance or operate it.	<ul style="list-style-type: none"> <li>• Activate the appliance again and set the heat setting in 10 seconds.</li> <li>• You touched 2 or more sensor fields at the same time. Only touch one sensor field.</li> <li>• The Child Safety Device or the Lock or Stop+Go operates. See the chapter Operating instructions.</li> <li>• There is water or fat stains on the control panel. Clean the control panel.</li> </ul>
A Sound operates and the appliance deactivates. A sound operates when the appliance is deactivated.	You put something on one or more sensor fields. Remove the object from the sensor fields.
The appliance deactivates.	You put something on the  . Remove the object from the sensor field.
The residual heat indicator does not come on.	The cooking zone is not hot because it operated only for a short time. If the cooking zone should be hot, speak to the service centre.
The Automatic Heat Up function does not operate.	<ul style="list-style-type: none"> <li>• There is still residual heat on the cooking zone. Let the cooking zone become sufficiently cool.</li> <li>• The highest heat setting is set. The highest heat setting has the same power as the Automatic Heat Up function.</li> </ul>
You cannot activate the outer ring.	Activate the inner ring first.
The sensor fields become hot.	The cookware is too large or you put it too near to the controls. Put large cookware on the rear cooking zones if it is necessary.
There is no signal when you touch the panel sensor fields.	The signals are deactivated. Activate the signals (see OffSound Control).
 comes on	The Automatic Switch Off operates. Deactivate the appliance and activate it again.
 and number comes on.	There is an error in the appliance. Disconnect the appliance from the electrical supply for some time. Disconnect the fuse from the electrical system of the house. Connect again. If  comes on again, speak to the service centre.

If you tried the above solutions and cannot repair the problem, speak to your dealer or the customer service. Give the data from the rating plate, three digit letter, code for the glass ceramic (it is in the corner of the glass surface) and an error message that comes on. Make sure, you operated the appliance correctly. If not the servicing by a customer service technician or dealer will not be free of charge, also during the warranty period. The instructions about the customer service and conditions of guarantee are in the guarantee booklet.

## ENVIRONMENT CONCERNS

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

### Packaging material



The packaging materials are friendly to the environment and can be recycled. The plastic components are identified by marking: >PE<,>PS<, etc. Discard the packaging materials as household waste at the waste disposal facilities in your municipality.

## WARRANTY



### FOR SALES IN AUSTRALIA AND NEW ZEALAND

This document sets out the terms and conditions of product warranties for Electrolux branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Electrolux appliance. General Terms and Conditions

1. In this warranty
  - 'Electrolux' means Electrolux Home Products Pty Ltd ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
  - 'Appliance' means any Electrolux product purchased by you accompanied by this document;
  - 'Warranty Period' means
    - i) where you use the Appliance for personal, domestic or household purposes in Australia the period of 24 months and in New Zealand the period of 24 months;
    - ii) where you use the Appliance for commercial purposes, in Australia the period of 0 months and in New Zealand the period of 0 months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
  - 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.

3. Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
5. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
6. Where you are within an Electrolux service area, this warranty covers the cost of transport of the Appliance to and from Authorised Service Centres of Electrolux and travelling costs for representatives of the Authorised Service Centre to and from your home or business. If you are outside an Electrolux service area, you will bear these costs. For information about whether you are within an Electrolux service area, please phone 13 13 49 in Australia, or 0800 10 66 10 in New Zealand.
7. Proof of purchase is required before you can make a claim under this warranty.
8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
  - The Appliance is damaged by
    - i) accident
    - ii) misuse or abuse, including failure to properly maintain or service
    - iii) normal wear and tear
    - iv) power surges, electrical storm damage or incorrect power supply
    - v) incomplete or improper installation
    - vi) incorrect, improper or inappropriate operation
    - vii) insect or vermin infestation.
  - The Appliance is modified without authority from Electrolux in writing.
  - The Appliance's serial number or warranty seal has been removed or defaced.
  - The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.
9. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the Australian State where the Appliance was purchased or the law applicable in New Zealand if the Appliance was purchased in New Zealand. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

#### **Limitation of Liability**

10. To the extent permitted by law:
  - Electrolux excludes all warranties other than as contained in this document;
  - Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.



11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so);
- in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or
  - in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied;
- and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

### Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

### Important Notice

Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

**FOR SERVICE**  
OR TO FIND THE ADDRESS OF  
YOUR NEAREST STATE SERVICE  
CENTRE IN AUSTRALIA  
Please call **13 13 4 9**

For the cost of a local call (Australia  
only)

**SERVICE AUSTRALIA**  
 **Electrolux**  
ELECTROLUX HOME PROD-  
UCTS

**FOR SPARE PARTS**  
OR TO FIND THE ADDRESS OF  
YOUR NEAREST STATE SPARE  
PARTS CENTRE IN AUSTRALIA  
Please call **13 13 50**

For the cost of a local call (Australia  
only)

**FOR SERVICE**  
OR TO FIND THE ADDRESS OF  
YOUR NEAREST AUTHORISED  
SERVICE CENTRE IN NEW ZEA-  
LAND

Free call **0800 10 66 10**

(New Zealand only)

**SERVICE NEW ZEALAND**  
 **Electrolux**  
ELECTROLUX HOME PROD-  
UCTS

**FOR SPARE PARTS**  
OR TO FIND THE ADDRESS OF  
YOUR NEAREST SPARE PARTS  
CENTRE IN NEW ZEALAND

Free call **0800 10 66 20**

(New Zealand only)

## Q - Warranty

**AEG** products are designed and built to the highest standards.  
We expect your appliances to provide many years of trouble free enjoyment.  
In the event of an appliance requiring attention, each appliance is covered by a 2 year warranty from the date of purchase.

Refer to warranty policy for complete terms and conditions.

Coverage is for costs of parts and labor for appliances in capital cities & metropolitan areas. We reserve the right to charge directly for handling expenses outside the metropolitan region.

**AEG** products are supported by a national service support system.  
Call our customer service department for attention.

**Please retain your invoice **AEG** to quote should you require service assistance. This will identify your product for our priority service back-up. Please attach your invoice to this manual for easy future reference.**

AEG Canada  
871 Cranberry Court  
Oakville, Ontario L6L 6J7  
Canada

Tel 905-829.3980  
Fax 905-829.3985  
email [marketing@euro-line-appliances.com](mailto:marketing@euro-line-appliances.com)

For Service & Spares:  
**EURO-PARTS**  
1.800.678.8352

**Important:** Please record details of your purchase below and mail or fax to AEG

-----cut along line-----



Name: \_\_\_\_\_ TEL No \_\_\_\_\_  
Address: \_\_\_\_\_  
City : \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_  
Where purchased: \_\_\_\_\_ Purchase date: \_\_\_\_\_  
Items purchased: \_\_\_\_\_  
Serial No. (s): \_\_\_\_\_

---

AEG appliances are imported and distributed in North America by Euro-Line Appliances Inc.  
For more information visit  
[www.euro-line-appliances.com](http://www.euro-line-appliances.com) / [www.elawest.com](http://www.elawest.com)

***EURO-LINE APPLIANCES INC.***

871 Cranberry Court  
Oakville, ON L6L 6J7  
Canada  
Toll Free: 1.800.421.6332  
Showroom: 905.829.3980  
[marketing@euro-line-appliances.com](mailto:marketing@euro-line-appliances.com)

***EURO-LINE APPLIANCES WEST INC.***

2912 West 4th Ave  
Vancouver, BC V6K 1R2  
Canada  
Toll Free: 1.855.352-9378  
Showroom: 604.235.3980  
[info@elawest.com](mailto:info@elawest.com)