

# Operating instructions



## Heat-pump dryer



It is **essential** to read these operating instructions before installation or use of this appliance. This prevents both personal injury and damage to the appliance.

# Contents

---


<b>Caring for the environment</b> .....	6
<b>WARNING AND SAFETY INSTRUCTIONS</b> .....	7
<b>Operating the tumble dryer</b> .....	15
Control panel .....	15
Operating the sensor buttons .....	16
Display .....	17
Appliance operation examples .....	17
<b>Energy saving tips</b> .....	18
<b>Functioning of the heat-pump dryer</b> .....	19
<b>Initial commissioning</b> .....	20
Downtime after installation .....	20
<b>1. Notes on correct laundry care</b> .....	23
Points to note regarding washed laundry .....	23
Preparing the laundry before drying .....	23
Garment care label symbols .....	24
Laundry care when drying in a tumble dryer .....	24
<b>2. Selecting a program</b> .....	25
<b>3. Loading the tumble dryer</b> .....	27
<b>4. Selecting program settings</b> .....	28
Program settings .....	28
Programs with drying levels .....	28
Time-controlled and other programs .....	28
Selecting an extra option .....	29
 EcoFeedback .....	29
 Delay start/SmartStart .....	29
<b>5. Starting a program</b> .....	31
<b>6. Program end – removing the laundry</b> .....	32
Program end .....	32
Removing the laundry .....	32
<b>Program chart</b> .....	33

<b>Extra options</b> .....	37
Gentle tumble.....	37
Freshen up.....	37
Anti-crease .....	37
Buzzer.....	37
Selectable extra options.....	38
<b>Changing the program sequence</b> .....	39
<b>Condensed water container</b> .....	40
Emptying the condensed water container .....	40
<b>Fragrance capsule</b> .....	41
Inserting a fragrance capsule .....	41
Replacing the fragrance capsule.....	44
<b>Cleaning and care</b> .....	46
Cleaning the lint filters .....	46
Removing visible lint.....	46
Cleaning the lint filters and air flow openings thoroughly .....	47
Cleaning the plinth filter.....	50
Removing the plinth filter .....	50
Cleaning the plinth filter.....	51
Cleaning the plinth filter flap.....	51
Checking the heat exchanger unit.....	52
Replacing the plinth filter.....	52
Cleaning the dryer .....	53
<b>Frequently Asked Questions</b> .....	54
The display indicates the following messages or faults.....	54
Unsatisfactory drying results.....	56
The drying cycle duration is very long.....	57
General problems with the tumble dryer .....	58
Bottom right grille.....	59
<b>Service</b> .....	60
Contact in case of a fault .....	60
Warranty .....	60
Optional accessories.....	60

# Contents

---

<b>WARNING AND SAFETY INSTRUCTIONS .....</b>	<b>62</b>
<b>Installation and connection .....</b>	<b>64</b>
Front view .....	64
Rear view.....	65
Transporting the tumble dryer .....	65
Transporting the tumble dryer to its installation site .....	65
Installation .....	66
Installation .....	66
Downtime after installation.....	66
Ventilation.....	66
Before moving the tumble dryer again .....	66
Additional installation requirements .....	67
Product dimensions .....	69
Dimensions.....	69
Installation on a plinth .....	69
Washer-dryer stack .....	69
Electrical connection .....	70
Connection adapter for NEMA 14-30 socket.....	70
External draining of condensed water.....	71
Arranging the drain hose .....	71
Condensate drain .....	71
Changing the door hinging.....	72
Changing the hinging over .....	72
Refitting .....	77
<b>Technical data.....</b>	<b>78</b>

<b>Settings</b> .....	79
Calling up settings.....	79
Language  .....	80
Drying levels .....	80
Welcome.....	80
Keypad tone .....	80
Buzzer volume.....	80
Airway indicator .....	81
Conductivity .....	81
Code.....	82
Brightness .....	82
Display.....	82
Button lighting on .....	82
Button lighting off .....	82
Display switch-off.....	83
Memory .....	83
Anti-crease .....	83
Program info .....	83
Miele@home .....	84
Remote control .....	85
SmartGrid .....	85

# Caring for the environment

---

## Disposal of the transport packaging material

The packaging material protects the dryer from transport damage. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also the amount of waste.

## Disposal of your old appliance

Electronic and electrical appliances contain many valuable materials. They also contain certain materials, compounds and components which were essential for their correct functioning and safety. These could be hazardous to your health and to the environment if disposed of with general waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with general waste.



Instead, please make use of officially designated collection and disposal points to dispose of and recycle electrical and electronic appliances in your local community, dealer, or with Miele. By law, you are solely responsible for deleting any personal data from the appliance prior to disposal. Ensure that it presents no danger to children while being stored for disposal.

## WARNING AND SAFETY INSTRUCTIONS

### WARNING

In order to prevent fire, electric shock or injury to persons during the use of this tumble dryer, you must observe the following vital precautionary measures:

### WARNING

This tumble dryer is intended for use in domestic households and similar working and residential environments.

- ▶ You must read all instructions before using the tumble dryer for the first time.
- ▶ Children must not play with, on or inside the tumble dryer. Children should be supervised in the vicinity of the tumble dryer. Make sure the door of the tumble dryer is always closed in order to avoid endangering children.
- ▶ If the tumble dryer is no longer in use and you wish to dispose of it, remove the door.
- ▶ Do not install or use a dryer with visible damage.
- ▶ Do not touch the drum whilst it is still rotating.
- ▶ Do not store or operate the tumble dryer outdoors.
- ▶ Do not make any alterations to the tumble dryer.
- ▶ Unauthorized repairs could result in unforeseen dangers for the user, for which Miele cannot accept liability. Do not make any alterations to the tumble dryer, unless authorized to do so by Miele. Repairs should only be carried out by a Miele approved service technician, otherwise there could be a considerable danger to the user.

## WARNING AND SAFETY INSTRUCTIONS

---

► Important information regarding use of fabric softener sheets:

We do not recommend use of fabric softener sheets. Use of fabric softener sheets can clog the surfaces of the lint filters, extending the drying time and increasing energy consumption. During subsequent cleaning, the plastic and surfaces of the lint filters can be damaged!


The best results are obtained by using liquid fabric softener in the washing machine. Follow the manufacturer's instructions.

If you still wish to use fabric softener sheets, be sure to follow the cleaning instructions under “Cleaning and care” in the “Cleaning instructions when using fabric softener sheets” section.

Tip:

Using a fragrance capsule (optional accessory) will add a pleasant fragrance to your laundry.

When a fragrance capsule is used, the fragrance is absorbed by the entire load of laundry. The disadvantage of fabric softener sheets is that the fragrance is sometimes only absorbed by a few items of laundry, especially when drying a full load.

 When you use a fragrance capsule, always follow the warnings in this section as well as those under “Fragrance capsule”.



## WARNING AND SAFETY INSTRUCTIONS

► To prevent the risk of fire, the following items must not be tumble dried:

- Items which have not been washed.
- Items which have not been thoroughly cleaned and are still soiled with grease, oil or other deposits (such as work clothes, kitchen linens or cosmetics cloths with lubricants, cooking oils, grease, lotions, etc, as there is a danger that they might ignite when heated (chemical reaction), even after they have been removed from the dryer at the end of the program.
- Items which have been washed or dry-cleaned using chemicals or other flammable substances (e.g. professional dry-cleaning agents). They could emit explosive fumes.
- Items that have been soiled with flammable or explosive cleaning agents or substances containing acetone, alcohol, gasoline, petroleum, kerosene, spot removers, turpentine, waxes, wax removers and other chemicals (e.g. mops and floor cloths).
- Items which have been soiled with hair lacquer, hair spray, nail polish remover or similar substances.

⚠ When washing such heavily soiled items ensure that you use a larger quantity of detergent and select a high temperature. If in doubt, wash the items several times.

- Items which contain a large proportion of rubber, foam rubber or rubber-like materials. For example, products made from latex foam rubber, shower caps, waterproof textiles, rubberized articles, and items of clothing and pillows with foam rubber filling.
- Items which contain padding or fillings (e.g. pillows, jackets) and are damaged. The filling could fall out and cause a risk of fire.

## WARNING AND SAFETY INSTRUCTIONS

---

► In many programs, the heating phase is followed by a cooling down phase to ensure that the items are not too hot to handle when you remove them (this also prevents the danger of the laundry igniting). The program is not finished until after the cooling down phase. It is advisable to remove all laundry as soon as the program has finished.

► The lint filters must be cleaned before or after every drying cycle!

► Keep the room where the tumble dryer is located, particularly the plinth area, free from dust and lint.

► The inside of the tumble dryer must be cleaned regularly by an authorized specialist.

### ► GROUNDING INSTRUCTIONS

The electrical safety of this dryer can only be guaranteed when continuity is complete between it and an effective grounding system. It is essential that this standard safety requirement is observed and regularly tested. If in any doubt, please have the electrical installation inspected by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate grounding system. The electrical socket must be easily accessible so that the dryer can be disconnected from the electricity supply.

► **WARNING** – If the grounding conductor is connected incorrectly, this can result in electric shock. Contact a qualified electrician if you are unsure whether the appliance is properly grounded.

## WARNING AND SAFETY INSTRUCTIONS


---

- ▶ Do not change the plug: If it does not fit into the socket, you should have a proper outlet installed by a qualified electrician.
- ▶ In the event of a fault or during cleaning and maintenance, the tumble dryer is only completely disconnected from the electricity supply when the tumble dryer plug has been removed or if the fuse has been disconnected or if the screw-out fuse has been removed. Do not switch on the supply until the task has been completed.
- ▶ Miele tumble dryers and Miele washing machines can be installed as a washer-dryer stack. A Miele washer-dryer connection kit is required as an optional accessory for this. Please ensure that the washer-dryer connection kit is suitable for the Miele tumble dryer and the Miele washing machine.
- ▶ If you order a plinth for this tumble dryer (available from Miele as an optional accessory), make sure it is the correct one.
- ▶ The maximum dry laundry weight is 8,0 kg.  
See the “Program chart” for the maximum recommended loads for individual programs.
- ▶ Do not place shoes inside the drum for drying. Placing shoes inside the drum for drying can cause the belt to tear, requiring a service call.  
You must always use the dryer basket (optional accessory) when drying/airing shoes. Follow the additional operating instructions for the dryer basket.
- ▶ This tumble dryer is supplied with a special lamp to cope with particular conditions (e.g. relating to temperature, moisture, chemical resistance, abrasion resistance and vibration). This special lamp must only be used for the purpose for which it is intended. It is not suitable for room lighting. Replacement lamps may only be fitted by a Miele authorized person or by Miele Customer Service.

## WARNING AND SAFETY INSTRUCTIONS

### ► Heat pump technology and refrigerant:

The heat pump in this tumble dryer uses a gaseous refrigerant which is condensed by the compressor. The refrigerant, which is brought to a higher temperature level and liquefied by condensing, is led in a closed circuit through the heat exchanger unit where heat exchange with the circulating drying air takes place.

 After installation, downtime of 1 hour is required before connecting the tumble dryer to the electricity supply. Otherwise, the heat pump could be damaged.

- The humming noises caused by the heat pump during the drying process are normal. This does not impair the efficient functioning of the dryer.
- The refrigerant is not flammable or explosive.
- This tumble dryer contains fluorinated greenhouse gases. Hermetically sealed.

Designation of refrigerant: R134a

Amount of refrigerant: 0,47 kg

Global warming potential of refrigerant: 1430 kg CO<sub>2</sub> e

Global warming potential of appliance: 672 kg CO<sub>2</sub> e

► This product can contain chemicals known by the state of California to cause cancer, birth defects and other genetic defects.

### Using a fragrance capsule (optional accessory)

- ▶ Only use genuine Miele original fragrance capsules.
- ▶ The fragrance capsule must be stored in its original packaging so please make sure you retain this.
- ▶ Caution: The fragrance can leak out of the capsule! Make sure that you always keep the capsule or the lint filter with the capsule inserted in it in a horizontal position when carrying, and do not tip or place it down on any surface.
- ▶ Use an absorbent cloth to wipe up any fragrance which has leaked out of the capsule onto the floor, the dryer or any dryer components (e.g. the lint filter) immediately.
- ▶ If fragrance comes in contact with the body: Wash **skin** thoroughly with soap and water. Flush **eyes** with clean water for at least 15 minutes. If swallowed, rinse **mouth** thoroughly with clean water. Seek medical attention if the fragrance comes in contact with the eyes or is swallowed!
- ▶ Immediately change clothes that have come in contact with the fragrance. Thoroughly wash clothing or fabric using a large amount of water and detergent.
- ▶ There is the risk of fire or damage to the tumble dryer if the following instructions are not observed:
  - Never refill a capsule with fragrance.
  - Never use a faulty fragrance capsule.
- ▶ Dispose of an empty fragrance capsule with the household waste and never use it for any other purpose.
- ▶ Please also observe the information supplied with the fragrance capsule.

## **WARNING AND SAFETY INSTRUCTIONS**

---

### **FCC Declaration of Conformity**

► This appliance complies with Part 15 of the FCC regulations. This appliance has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and is subject to the following conditions: This appliance does not cause harmful interference. The appliances may be interconnected as desired.

### **FCC Radiation Exposure Statement**


► This appliance complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. These appliances should be installed and operated with a minimum distance of 8" (20 cm) between the radiator and body.

### **Industry Canada Statement**

► This digital device does not exceed the Class B limits for radio noise emissions from digital devices specified in the radio regulations of the Canadian Radio-television and Telecommunications Commission. This appliance complies with the Class B specification of the Canadian ICES-003.

**KEEP THESE OPERATING INSTRUCTIONS IN A SAFE PLACE**

## Control panel

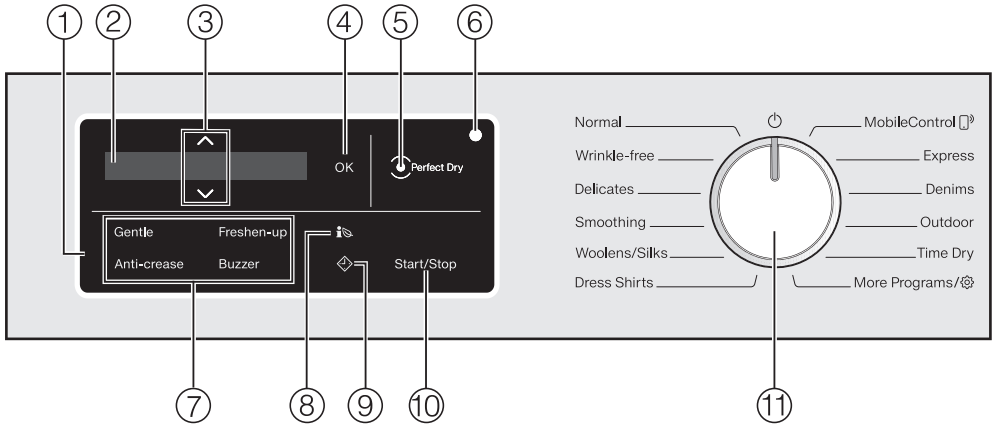

### ① Control field

The control field consists of a display and various sensor buttons. The individual sensor buttons are explained in the following sections.

### ② Display

The following values are displayed and/or selected on the display:

1. The program names, the drying level and the duration of the selected program.
2. The individual values of the selection lists for the settings.

### ③ Sensor buttons ▲▼

The values in the display can be changed with the ▲▼ sensor buttons. The ▲ sensor button increases the value or moves the selection list up; the ▼ sensor button decreases the value or moves the selection list down.

### ④ OK sensor button

Confirm the selected values with the OK sensor button. After selecting the program, you can confirm your selection with the OK button or wait until OK goes out by itself.

### ⑤ Perfect Dry indicator

With programs with a selectable drying level, the Perfect Dry system calculates the residual moisture present in the laundry to ensure a precise drying result. The *Perfect Dry* indicator. . . . . will flash after the program has started and go out when the program duration appears in the display. . . . . will light up again when the selected drying level is reached and remain on until the end of the program. . . . . will remain dark with the following programs: *Woolens/Silks*, *Cold Air*, *Time Dry*.

# Operating the tumble dryer

---


## ⑥ Optical interface

This is used by the Service department as a transmission point.


## ⑦ Sensor buttons for extra options

You can select extra options to augment the wash programs. If a drying program has been selected, the sensor buttons for the possible extra options light up dimly.

## ⑧ Sensor button

You can use the  sensor button to call up an energy consumption forecast for the selected drying program.

 
## ⑨ Sensor buttons

The sensor button  starts the delay start function. With the delay start function, you can delay the start of the program. The start of the program can be delayed from 15 minutes up to a maximum of 24 hours. This allows you to make use of night-time economy electricity rates, for example. Please see “Delay start” for more information.

## ⑩ Start/Stop sensor button

Touching the *Start/Stop* sensor starts the selected program or cancels a program that has already been started. The sensor button flashes slowly as soon as it is possible for a program to be started and then lights up constantly after the program has started.

## ⑪ Program selector

For selecting programs and for switching off. The tumble dryer is switched on when you select a program, and switched off by turning the program selector to the  position.

## Operating the sensor buttons

The sensor buttons react to fingertip contact. Selection is possible as long as the respective sensor button is illuminated.

If a sensor button is brightly lit, this means: currently selected

If a sensor button is dimly lit, this means: selection possible



# Operating the tumble dryer

## Display

The basic display shows the following for a drying level program:




- The selected drying level and the expected program duration
- The drying level reached after the start of the program and the remaining program duration

The basic display shows only the program duration for a time-controlled program:



## Appliance operation examples

### Scrolling through a list

The  scroll bar in the display indicates that a selection is available.



Touching the  $\nabla$  sensor button scrolls down the list to the next option and touching the  $\Delta$  sensor button scrolls up the list to the next option. The OK sensor button is used to activate the option in the display.

### Identifying the selected option



An option which has been activated will have a check  $\checkmark$  next to it.

### Setting numerical values



The numerical value is highlighted in white. Touching the  $\nabla$  sensor button decreases the value and touching the  $\Delta$  sensor button increases it. The OK sensor button is used to activate the value in the display.

### Exiting a sub-menu

Select Back  to exit a sub-menu.

## Energy saving tips

---

This dryer is designed for energysaving drying cycles thanks to its heat pump technology. However, you can save a little more energy with the following measures as the drying time is not extended unnecessarily.

- Make sure your laundry is spun at the maximum spin speed before drying. The higher the spin speed, the greater the savings that can be made in energy and time during drying, e.g. approx. 20 % energy can be saved if spun at 1600 rpm instead of 1000 rpm.
- Load according to the optimum amount of laundry recommended for the program being used. This will mean that the energy consumption for the amount of laundry is at its most economical.
- Make sure that the room temperature is not too high. If there are other heat producing appliances in the room in which the dryer is located, make sure the room is well ventilated and switch the other appliances off, if possible.
- Clean the lint filters in the door opening after every drying cycle.

# Functioning of the heat-pump dryer

Two separate circuits ensure that the laundry is dried:

## Dry air circuit

The drying air flows through a heat exchanger, the drum and several filters. This is ensured by a blower in the dryer.

- The drying air flows through the heat exchanger in the longitudinal direction and is heated in the rear area.
- The drying air is then blown into the drum, where it absorbs the moisture of the laundry.
- The damp drying air is blown back through the heat exchanger via several filters in the fill area and the plinth area of the dryer.
- The drying air cools down in the front, cool area of the heat exchanger and loses its moisture.
- The circuit begins afresh.

## Refrigerant circuit

The refrigerant circuit regulates the heating and cooling of the drying air through the heat exchanger. The heat pump is the central component: This is a compressor that is connected to a pipeline system which is filled with refrigerant.

- The pipeline system surrounds the heat exchanger in several bends.
- The compressor draws in the gaseous refrigerant and compresses it, causing the temperature to rise.
- The hot refrigerant is passed through the pipeline system to the rear of the heat exchanger. The heat is released into the drying air, which flows through the heat exchanger.
- The refrigerant liquifies by dissipating the heat.
- The liquid refrigerant then flows through a capillary tube (a very thin tube) to the front area of the heat exchanger. This changes the pressure of the refrigerant.
- The refrigerant cools and reverts to its gaseous state. This in turn cools the front area of the heat exchanger and dehumidifies the drying air.
- The circuit begins anew.

# Initial commissioning

## Downtime after installation

⚠ After installation, downtime of 1 hour is required before connecting the tumble dryer to the electricity supply. Otherwise, the heat pump could be damaged.

## Removing the protective foil and stickers

- Remove:
  - The protective foil from the door.
  - Any stickers from the front and the lid.

⚠ Please do not remove any labels (e.g. the data plate) which are visible when you open the door.

## Switching on the tumble dryer

- Turn the program selector to the *Normal* program.

The welcome tone will sound and the welcome screen will light up.

## Setting the language

You are requested to set the display language. It is possible to change the language at any time by setting the program selector to the *More programs/* ⚙ position in the Settings ⚙ sub-menu.



- Touch the v/^ sensor buttons until the language you want appears in the display.
- Confirm your language selection by touching the OK button.

## Setting up Miele@home

Your tumble dryer is equipped with an integrated WiFi module. The dryer can be connected to the household WiFi network.

You will then be able to operate the dryer via the Miele@mobile app.

The following message appears in the display:

 Miele@home

- Touch the OK sensor button.



- To set up Miele@home now:  
Touch the OK sensor button.
- To postpone setup until later:  
Touch the ∇ sensor button until Set up later appears in the display and press the OK sensor button to confirm.
- Select the required connection type from the display.

1. Connect via WPS
2. Connect via App

Before installing the dryer in its final location, ensure the signal strength is sufficient for your WiFi network.

## Miele@mobile app

The Miele@mobile App is available to download free of charge from the Apple App Store® or from the Google Play™ store.



## Connecting with WPS

Your WiFi router must support WPS (WiFi Protected Setup).

- Follow the instructions in the display.

If the connection fails, you have probably not connected WPS to your router quickly enough. Repeat the steps above.

**Useful tip:** If your WiFi router does not support WPS, please connect via the Miele@mobile app.

# Initial commissioning

## Connecting via the app


The Miele@mobile app can be used to connect to your network.

- Install the Miele@mobile app on your mobile device.
- Follow the instructions in the app.

To log in you will need:

1. Your WiFi network password
2. The password for your tumble dryer

The password for your dryer consists of the last nine digits on the serial number. This can be found on the appliance's data plate.

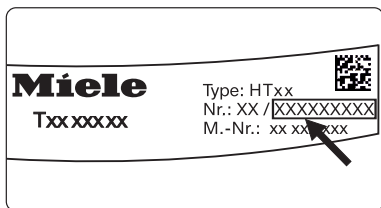

If the connection is successful, the following will appear in the display:



- Confirm with the *OK* sensor button

## Continue set up according to Operating Instructions

- Confirm with the *OK* sensor button.
- See “1. Notes on correct laundry care”.
- You can then select a program and load the tumble dryer as described in “2. Selecting a program” and “3. Loading the tumble dryer”.


The procedure for initial commissioning is completed when a program lasting longer than one hour has been carried out in full.

# 1. Notes on correct laundry care


## Points to note regarding washed laundry

- When washing very heavily soiled items, ensure that you use sufficient detergent and select a high temperature. If in doubt, wash the items several times.
- Do not load the drum with items that are still soaking wet. Make sure your laundry is spun at the maximum spin speed before drying. The higher the spin speed, the greater the savings that can be made in energy and time during drying.
- New dark-coloured garments should be washed and dried separately from light-coloured garments. There is the risk of colours running and discolouring other garments or even plastic components in the dryer. Dark coloured fibres can also settle on light coloured garments and vice versa.
- Starched laundry can be tumble dried. To achieve the usual finish, double the amount of starch should be used.

## Preparing the laundry before drying

 Ensure that any foreign objects (e.g. detergent dispensing balls, lighters etc.) have been removed from the laundry!








Such items could melt or explode and cause damage to the dryer or the laundry.

 See “Important safety instructions” for further information.  
Using the tumble dryer incorrectly could cause a fire!

- Sort the laundry according to the type of fibre and weave, size, garment care label symbol and the drying level required.
- Check seams and stitching to ensure that padding and linings are intact. This way you will avoid the danger of fillings coming out. These could catch fire when being dried!
- Untangle the laundry.
- Tie together textile belts and apron ties.
- Fasten . . .  
. . . duvet covers and pillow cases to prevent small items from being rolled up inside them.  
. . . hooks and eyes.
- Sew in or remove underwiring from bras.
- Leave jackets open and undo any long zips so that textiles dry evenly.
- Wrinkle-free fabric tends to crease more, the larger the load. This is particularly the case for garments made from very fine weave fabric, such as dress shirts or blouses. If necessary, reduce the size of the load for these types of fabric.

# 1. Notes on correct laundry care

## Garment care label symbols

Drying	
	Normal/higher temperature
	Reduced temperature: select <i>Gentle</i> (for delicate textiles)
	Do not tumble dry
Ironing	
	Very hot
	Hot
	Warm
	Do not iron

## Laundry care when drying in a tumble dryer

See the “Program chart”.  
This describes the programs and gives their maximum load.

- Always observe the maximum recommended load for each program. This will mean that the energy consumption for the amount of laundry is at its most economical.
- Down-filled garments have linings which have a tendency to shrink, depending on the quality of the item. Only use the *Smoothing* program for these items.
- You should only tumble dry pure linen if it is specified as suitable by the manufacturer on the care label. The surface of the fabric may otherwise become rough. Only use the *Smoothing* program for these items.

- Woollens and wool blends tend to become matted and shrink if tumble dried. Only use the *Woolens/Silks* program for these items.
- Jersey fabrics (e.g. T-shirts, underwear) tend to shrink when they are washed for the first time. Therefore, do not over-dry the fabrics to prevent them from shrinking further. Buy jersey fabrics that are one or two sizes bigger.
- Select the extra *Gentle* option for fabric which is particularly heat-sensitive or susceptible to creasing.


## Selecting the right drying level

- *Extra dry* or *Normal plus* if you want to fold the laundry after drying and put it in the closet.
- *Normal* or *Slightly dry* for textiles that can shrink. Or for light cotton or jersey textiles.
- *Hand iron* or *Machine iron* if you want to iron the laundry after drying.



## 2. Selecting a program

### Switching on the tumble dryer

The tumble dryer is switched on when you select a program, and switched off by turning the program selector to the  position.


- Turn the program selector to a program.

When a program is selected, the program name and the maximum load (weight of dry laundry) possible for the program will appear in the display for a few seconds.

### Selecting a program

There are three possible ways to select a program.

#### 1. Selecting the standard programs with the program selector dial

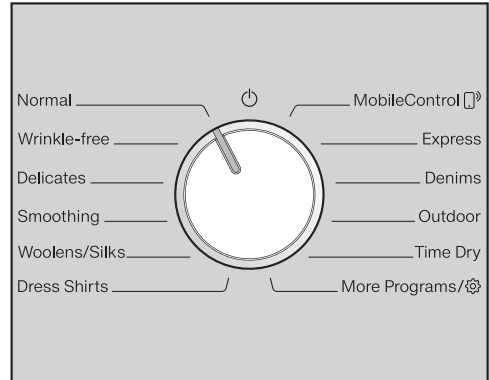


- Turn the program selector.

The selected program will be shown in the display. This will then be replaced by the standard display.

## 2. Selecting a program

**2. Selecting further programs via the “More programs/⚙️” position and the display:**

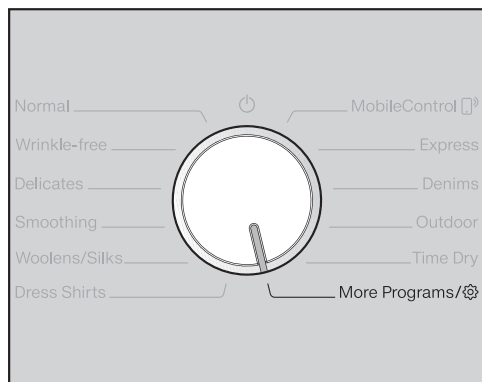

- Turn the program selector.

The following appears in the display:




- Touch the ^ v sensor buttons until the program you want appears in the display.
- Confirm the program with the OK sensor button.

The selected program will be shown in the display. This will then be replaced by the standard display.

**3. Selecting the programs via the MobileControl (with a smartphone icon) program selector position and the Miele@mobile app**

**Useful tip:** In order to use MobileControl (with a smartphone icon), the dryer must be logged on to the WiFi network and remote control must be switched on.

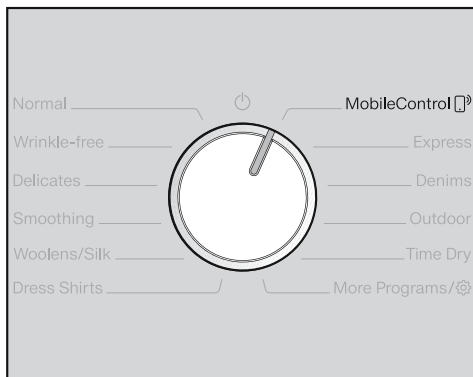

- Turn the program selector.
- Follow the instructions in the display.
- Touch the *Start/Stop* sensor button.


The dryer can now be operated via a mobile device together with the Miele@mobile app.

### 3. Loading the tumble dryer

⚠ First see “1. Notes on correct laundry care”.

This prevents damage to textiles or the dryer.


#### Opening the door

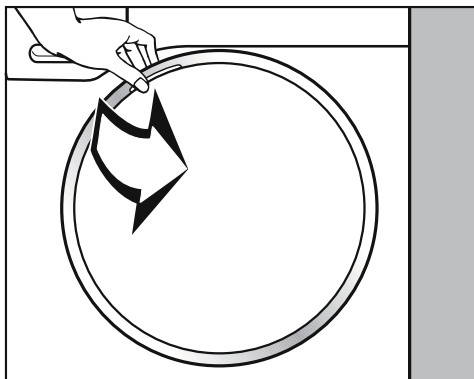

- Pull the door open at the side with the orange marker.
- Unfold the laundry and load loosely into the drum.


⚠ Do not overload the drum. Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.

⚠ When closing the door, make sure that laundry does not get trapped in the door opening. This could damage the laundry!

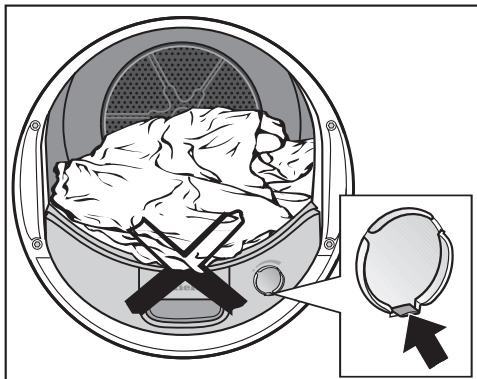

If you are not using a fragrance capsule: The tab must be pushed down completely (see arrow).

#### Closing the door

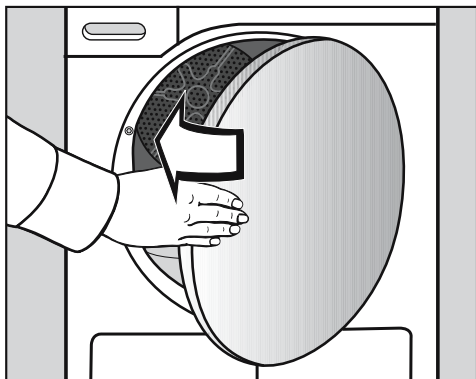

- Shut the door with a gentle swing.

## 4. Selecting program settings

### Program settings

#### Programs with drying levels

Normal, Wrinkle-free, Delicates, Smoothing, Dress Shirts, Express, Denims, Outdoor, Sportswear, Table Linens/Drapes, Bed Linens

The pre-set drying level can be changed if required.



- Touch the ∧ or ∨ sensor buttons to select a drying level.

Any drying level can be selected for the *Normal* and *Express* programs. A more limited range is available when using the other programs.

### Time-controlled and other programs

#### Time Dry, Cold Air, Basket

You can change the duration in 10-minute increments.

Cold Air: 20 min – 1:00 h

Time Dry: 20 min – 2:00 h

Basket: 40 min – 2:30 h



- Touch the ∧ or ∨ sensor buttons to select a duration.

#### Woolens/Silks, Proofing

The drying result is preset by the dryer and cannot be altered.

## 4. Selecting program settings

### Selecting an extra option


Gentle	Freshen up
Anti-crease	Buzzer

- Touch a sensor button to select the desired extra option.

The relevant sensor button will light up brightly.

 
*Freshen up* and *Gentle* cannot be combined, see “Extra options” for other notes.

### EcoFeedback

You can use the  sensor button to call up an energy consumption forecast for your dryer.

- Touch the  sensor button.

The estimated energy consumption levels will be displayed as a bar chart.



The more bars visible (|), the higher the energy consumption.

- Touch the OK sensor button or wait until the display automatically returns to the standard display.

### Delay start/SmartStart

#### Delay start

With the delay start function, you can delay the start of the program.

This function is active when the setting *SmartGrid* is switched off.

The hours can be set in the values from 00 to 24. The minutes can be set in 15-minute increments from 00 to 45.

#### Setting the delay start time

- Touch the  sensor button.

The following will appear in the display:



- Set the hours with the ∨ and ∧ sensor buttons. Confirm with the OK sensor button.

The display will change:



- Set the minutes with the ∨ and ∧ sensor buttons. Confirm with the OK sensor button.

**Useful tip:** The values will count upwards and downwards automatically if you keep your finger on the ∨ or ∧ sensor button.

#### Changing delay start

The selected delay start time can be changed before the program start.

- Touch the  sensor button.

## 4. Selecting program settings

- If desired, change the specified time and confirm with the *OK* sensor button.

### Cancelling delay start

The selected delay start time can be cancelled before the program start.

- Touch the  sensor button.

The selected delay start time will appear in the display.

- Set a time value of 00:00 h with the  $\nabla/\wedge$  sensor buttons. Confirm with the *OK* sensor button.

The selected delay start time has been cancelled.

After the program start, the selected delay start time can only be changed or cancelled by interrupting the program.

- The drum will turn briefly every hour until the start of the program to reduce laundry creasing.

### SmartStart


The SmartStart function lets you define a time period during which your dryer will start automatically. The start takes place via a signal, e.g. from your energy supplier, that indicates that the electricity tariff is particularly economical.

This function is active when the SmartGrid setting is switched on.

The time period can be defined between 15 minutes and 24 hours. During this period, the dryer waits for

the signal from the energy supplier. If no signal is sent during the defined period, the dryer starts the drying program.

### Setting the timeframe

If you have activated the SmartGrid function in Settings, SmartStart in instead of Start in will appear in the display when you touch the  sensor button (see “Settings, SmartGrid”).

The procedure for setting this is the same as for setting the time for delay start.

- Use the  $\nabla/\wedge$  sensor buttons to enter the hour and confirm your entry with the *OK* sensor button.

The hour will be saved and the minute numerical keypad will be highlighted.

- Use the  $\nabla/\wedge$  sensor buttons to enter the minutes and confirm your entry with the *OK* sensor button.
- Press the *Start/Stop* sensor button to start the drying program with SmartStart.

The following will appear in the display:



### Starting a program

- Touch the flashing *Start/Stop* sensor button.

The *Start/Stop* sensor button will light up and *Drying* appears in the display.

#### Notes

If a delay start time has been selected, it will count down in the time display. At the end of the delay start time or immediately after the program has started (if no delay start time has been selected), the program duration will appear in the time display.

- The *Perfect Dry* indicator will only flash/light up with programs with selectable drying levels (see also “Operating the tumble dryer”).
- This dryer measures residual moisture content in the laundry to ensure perfect drying results. However, if you load the dryer with little or dry laundry, it will be dried/aired for a set duration. In this case, *Perfect Dry* does not light up at the end of the program.



Avoid over-drying laundry and garments.  
Otherwise they can wear out!

The drying level reached for the selected drying level program will light up in the display.

You can view the selected drying level or time again:

- Touch the  $\wedge$  or  $\vee$  sensor button.
  - When *End / Cooling down* appears, the laundry is being cooled.

### Energy savings

After 10 minutes, the indicators dim and the *Start/Stop* sensor button starts flashing.

- Touch the *Start/Stop* sensor button to switch the indicators on again (this does not have any effect on a running program).

The drum lighting switches off once the program has started.


## 6. Program end – removing the laundry

### Program end


The program is finished when **End / Anti-crease** or **End** appears in the display. The **Start/Stop** button light goes out.

The dryer will switch off automatically 15 minutes after the end of the Anti-crease phase (with programs without an Anti-crease phase it will switch off 15 minutes after the end of the program).


### Removing the laundry

 **Never** open the door before the drying process has finished.

- Pull the door open at the side with the orange marker.

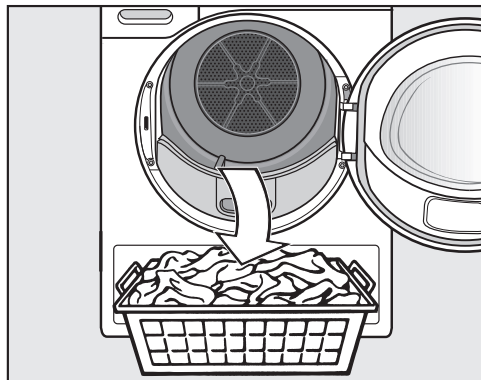

- Remove the laundry.

 Check that all items have been removed from the drum!

If items are left in the dryer, they could be damaged by over-drying when the dryer is next used.

- Turn the program selector to .

A signal sounds as long as the dryer does not switch off automatically.

- Remove the lint from the 2 lint filters in the door opening: see the “Cleaning and care, Lint filters”.
- Shut the door with a gentle swing.
- Empty the condensed water container.

### Drum lighting


The inside of the drum lights up so that you don't forget any items of laundry when you empty it.

The drum lighting will go out automatically to save energy.




## Program chart

All weights marked with \* are based on the weight of dry laundry.

Normal		Full load (17.6 lb/8 kg)*
Extra dry, Normal plus, Normal, Slightly dry		
Items	Single and multi-layered cotton items. For example, T-shirts, underwear, baby clothes, workwear, jackets, covers, aprons, overalls, hand towels, bath towels, bathrobes and flannelette/bed linen.	
Tip	<ul style="list-style-type: none"><li>– Select <i>Extra dry</i> for multi-layered and very thick fabrics.</li><li>– Do not use <i>Extra dry</i> for jersey fabrics (e.g. T-shirts, underwear, baby clothes) because they can shrink.</li></ul>	
Hand iron $\Delta$ , Hand iron $\Delta\Delta$ , Machine iron		
Items	All cotton or linen fabrics requiring further processing. For example, table linen, bed linen or starched laundry.	
Tip	To prevent laundry from drying out it should be rolled up until you are ready for ironing.	
Wrinkle-free		Half load (8.8 lb/4 kg)*
Normal plus, Normal, Slightly dry, Hand iron $\Delta$ , Hand iron $\Delta\Delta$		
Items	For wrinkle-free items made of cotton, synthetic or mixed fibre. For example, workwear, overalls, pullovers, dresses, pants, pantyhose and table linen.	
Delicates		Small load (5.7 lb/2.5 kg)*
Normal plus, Normal, Slightly dry, Hand iron $\Delta$ , Hand iron $\Delta\Delta$		
Items	Delicate items with the  symbol on the care label made of synthetic fibre, mixed fibre, rayon and easy care cotton. For example, dress shirts, blouses, lingerie and appliquéd garments.	
Tip	The load should be reduced further for a particularly crease-free drying process.	


# Program chart

Smoothing		Very small load (2.2 lb/1 kg)*
Normal, Hand iron <sup>Δ</sup>		
Items	<ul style="list-style-type: none"><li>– Cotton and linen fabric.</li><li>– For wrinkle-free items made of cotton, mixed or synthetic fibre. For example, pants, anoraks and shirts.</li></ul>	
Tip	<ul style="list-style-type: none"><li>– This program smooths out creasing caused during the spin cycle in the washing machine.</li><li>– This program is also suitable for dry fabrics.</li><li>– Please remove the garments as soon as the program has finished.</li></ul>	
Woolens/Silks		Small load (4.4 lb/2 kg)*
Items	<ul style="list-style-type: none"><li>– For woollen garments and fabric containing wool blends. For example, pullovers, knitted jackets and pantyhose.</li><li>– Silk garments which are suitable for tumble drying, e.g. blouses and shirts.</li></ul>	
Tip	<ul style="list-style-type: none"><li>– Woollen garments are loosened and fluffed up in a short amount of time.</li><li>– The program reduces the amount of creases in silk garments that are suitable for tumble drying.</li><li>– The items are not dried completely in this program.</li><li>– Please remove the garments as soon as the program has finished.</li></ul>	
Dress Shirts		Small load (4.4 lb/2 kg)*
Normal plus, Normal, Slightly dry, Hand iron <sup>Δ</sup> , Hand iron <sup>ΔΔ</sup>		
Items	For all shirts and blouses.	
MobileControl 		
The Miele@mobile app is used to select the programs and operate the appliance.		
Express		Half load (8.8 lb/4 kg)*
Extra dry, Normal plus, Normal, Slightly dry, Hand iron <sup>Δ</sup> , Hand iron <sup>ΔΔ</sup> , Machine iron		
Items	Suitable for resistant garments for the <i>Normal</i> program.	
Note	The program duration is shortened.	

## Program chart

<b>Denims</b>		<b>Small load (6.6 lb/3 kg)*</b>
<b>Normal plus, Normal, Slightly dry, Hand iron<math>\Delta</math>, Hand iron<math>\Delta\Delta</math></b>		
Items	All denim garments, e.g. jackets, jeans, shirts and skirts.	
<b>Outdoor</b>		<b>Small load (5.5 lb/2.5 kg)*</b>
<b>Normal, Hand iron<math>\Delta</math></b>		
Items	Outerwear which is suitable for drying in a tumble dryer.	
<b>Time Dry</b>		<b>Full load (17.6 lb/8 kg)*</b>
Items	<ul style="list-style-type: none"> <li>– For multi-layered fabric whose layers have different drying characteristics, e.g. jackets, pillows, sleeping bags and other voluminous items.</li> <li>– For drying individual items, e.g. bath towels, swimwear, dish cloths and towels.</li> </ul>	
Tip	Do not select the longest drying time to start with. Check the items as you are drying them to find the optimum time.	
<b>Table Linens/Drapes</b>		<b>Full load (8.8 lb/4 kg)*</b>
<b>Normal, Hand iron<math>\Delta</math>, Hand iron<math>\Delta\Delta</math></b>		
Items	For resistant garments made of cottons, linens or polycottons, e.g. table linen, curtains and drapes.	
<b>Cold Air</b>		<b>Full load (17.6 lb/8 kg)*</b>
Items	Any item which only needs airing.	
<b>Proofing</b>		<b>Small load (5.5 lb/2.5 kg)*</b>
Items	For drying microfibre fabrics, skiwear, outerwear, fine, closeweave cotton garments (poplin) and table linen which are suitable for drying in a tumble dryer.	
Note	<ul style="list-style-type: none"> <li>– Items are dried to a <i>Normal</i> level only.</li> <li>– This program includes a proofing fixing phase.</li> <li>– Only use proofing agents which are stated by the manufacturer as being “suitable for use on membrane textiles”. These agents contain fluorochemical compounds.</li> <li>– <b>Risk of fire!</b> Do not dry items which have been treated with proofing agents containing paraffin.</li> </ul>	


# Program chart

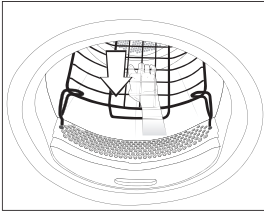Basket		Load for basket (7.7 lb/3.5 kg)
Note	<ul style="list-style-type: none"> <li>– This program may only be used with the Miele dryer basket (optional accessory) fitted.</li> <li>– It is essential to observe the operating instructions for the dryer basket!</li> </ul> 	
Fabric type/items	<ul style="list-style-type: none"> <li>– It is essential to observe the operating instructions for the dryer basket!</li> <li>– Only use this program to dry or air items which are suitable for drying in a tumble dryer but which are not suitable for drying using mechanical action.</li> <li>– Do not place shoes inside the drum for drying. Placing shoes inside the drum for drying can cause the belt to tear. You must always use the dryer basket when drying/airing shoes.</li> </ul>	
<b>Sportswear</b>		<b>Small load</b> (6.6 lb/3 kg)*
<b>Normal plus, Normal, Slightly dry, Hand iron<sup>Δ</sup>, Hand iron<sup>ΔΔ</sup></b>		
Items	For sportswear which is suitable for drying in a tumble dryer.	
<b>Bed Linens</b>		<b>Half load</b> (8.8 lb/4 kg)*
<b>Extra dry, Normal plus, Normal, Slightly dry, Hand iron<sup>Δ</sup>, Hand iron<sup>ΔΔ</sup>, Machine iron</b>		
Items	Bed linen	
Tip	<ul style="list-style-type: none"> <li>– Select <i>Extra dry</i> for multi-layered and very thick fabrics.</li> <li>– To prevent laundry from drying out it should be rolled up until you are ready for ironing.</li> </ul>	

The drying programs can be augmented with various extra options. However, *Freshen up* and *Gentle* cannot be combined.

Gentle	Freshen up
Anti-crease	Buzzer

### Gentle tumble

Delicate fabrics (with the  symbol on the care label, e.g. acrylic garments) are dried at a lower temperature and the program duration is longer.

### Freshen up

You can use the *Freshen up* Extra to help remove or reduce odours in clean (dry or damp) clothing.

The drying air is heated up for a specific length of time. After this, the garments are aired to the *Normal* drying level without any more heat being added. The drying level cannot be altered.

The option will be more effective if you dampen the garments a little beforehand, use a fragrance capsule and reduce the load. Please note that odours will not be removed as effectively from parts of garments made of synthetic fibres.

### Anti-crease

After the program has finished, the drum will continue to rotate in a certain rhythm for 2 hours, depending on the selected program. This “Anti-crease rhythm” helps to prevent creasing if the laundry is not removed immediately after the end of a program.

### Buzzer

A buzzer sounds to let you know the program has finished. The continuous buzzer which sounds during error messages is independent of this setting.

## Extra options

### Selectable extra options

These extra options can be selected in addition to the program

	Gentle <sup>1</sup>	Freshen up <sup>1</sup>	Anti-crease action	Buzzer
Normal	X	X	X	X
Wrinkle-free	X	X	X	X
Delicates	O	–	X	X
Smoothing	O	–	X	X
Woollens/Silks	–	–	–	X
Dress Shirts	X	X	X	X
Express	–	–	X	X
Denims	X	X	X	X
Outdoor	O	–	X	X
Time Dry	X	–	X	X
Table Linens/Drapes	–	–	X	X
Cold Air	–	–	X	X
Proofing	–	–	X	X
Basket	–	–	–	X
Sportswear	X	–	X	X
Bed Linens	–	–	X	X

<sup>1</sup> = These extra options cannot be combined with one another

**X** = Can be selected

**O** = Cannot be changed/Always active


**–** = Cannot be selected

## Changing the program sequence

You cannot change to another program once a program has started (this prevents unintentional alterations).

If you try to change a program, **i**

Change not possible lights up until the original program is reset.

Exception: The dryer is switched off by turning the program selector to the  position.

You will need to cancel the current program before you can select a new one.

### Cancelling a program

- Touch the *Start/Stop* sensor button.

Cancel Program lights up.

- Confirm with the *OK* sensor button.

 
End / Cooling down will light up in the display, depending on the drying duration and the drying temperature reached.

If Program cancelled appears:


- Turn the program selector to .

### If you would like to select another program

You can also directly cancel a running drying program if you immediately select another program and start it.

- Turn the program selector to .
- Turn the program selector to another program.
- Touch the *Start/Stop* sensor button.

### Adding or removing laundry

 Bear in mind that hot steam may escape when the door is opened.

- Pull open the door.
- Add or remove items.
- Close the door.
- Touch the *Start/Stop* sensor button.

The program starts.

### Program duration


Altering the program sequence can cause the program duration shown in the display to be adjusted.


# Condensed water container

## Emptying the condensed water container


The condensed water is collected in the condensed water container.

Empty the condensed water container after every drying program!

The Empty container See  indicator will light up if the maximum level of the condensed water container is reached. To turn the indicator light off: Open and close the door while the dryer is switched on.

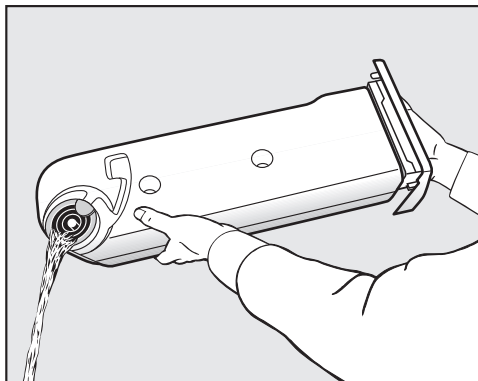

- Empty the condensed water container.
- Replace the condensed water container in the dryer.

 Do not drink condensed water! It can cause health problems in people and animals.



- Remove the condensed water container.
- To prevent water running out, keep it in a horizontal position when carrying it. Hold it at the front and towards the back.

You can use the condensed water in the household (e.g. for steam irons or humidifiers). For this, however, you should pour the condensed water through a fine sieve or a coffee filter bag. This filters the finest pieces of lint, which could possibly cause damage, out of the water.




## Fragrance capsule

Using a fragrance capsule (optional accessory) will add a pleasant fragrance to your laundry.

⚠ Before using a fragrance capsule, please read “Important safety instructions, Using a fragrance capsule (optional accessory)”.

### Inserting a fragrance capsule


Only hold the fragrance capsule as illustrated. Do not hold it at an angle or tip it as the fragrance will run out of the capsule.

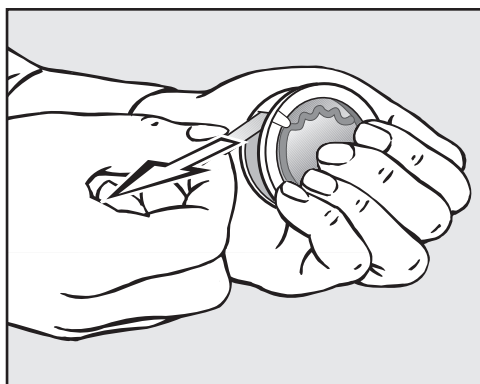


- Hold the capsule securely to prevent opening it by mistake!
- Pull off the protective seal.
- Open the door of the tumble dryer.

The fragrance capsule is inserted in the upper lint filter. The opening for this purpose is on the right-hand side beside the grip.

⚠ If you are not using a fragrance capsule: the cover must always remain closed (push the cover down completely with the tab)!

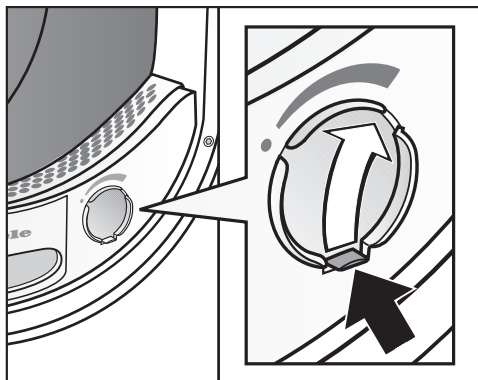


- Open the cover using the tab until the tab is at the top right-hand side as shown.

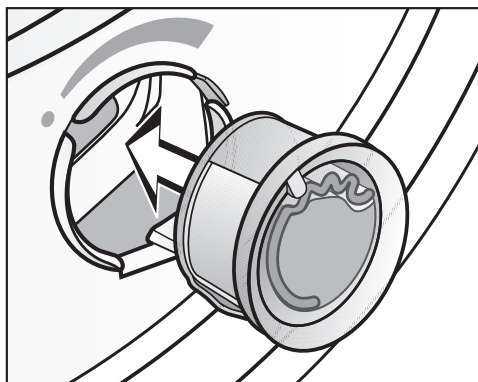


- Insert the capsule in the opening as far as it will go.


## Fragrance capsule

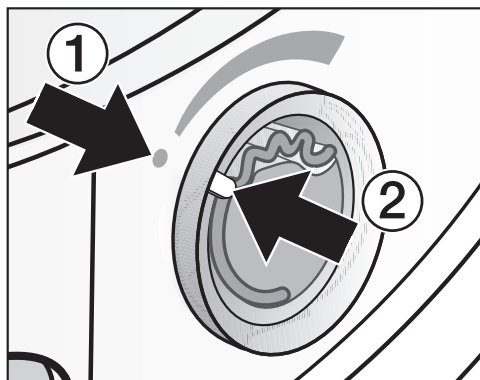

Markers ① and ② must line up with one another.

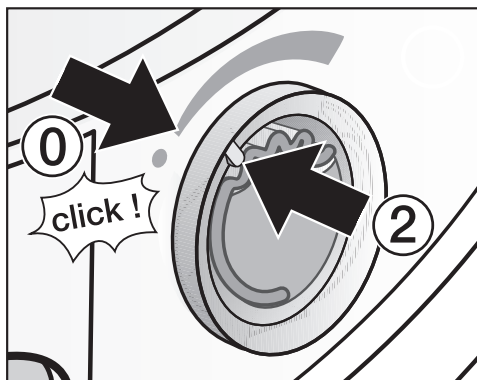

– You will feel a slight resistance and hear a soft click.

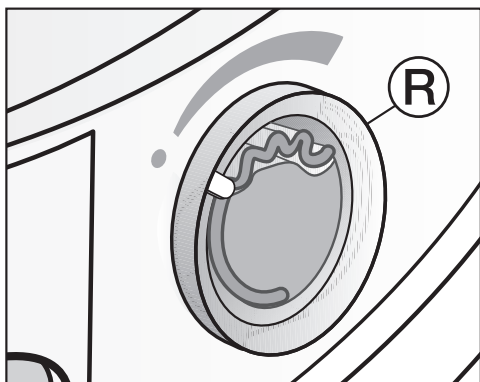


Marker ② must be in position ①: this is the position at which you can feel a resistance.

■ Turn the outer ring **R** clockwise a little.

### Before drying

You can select the intensity of the fragrance.

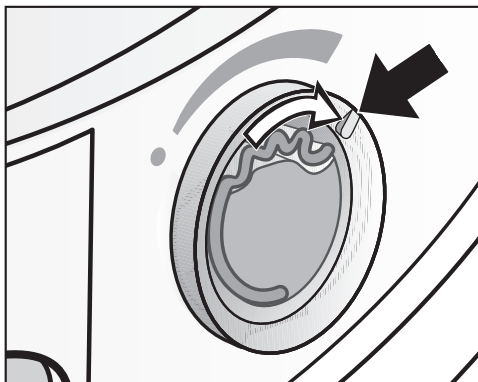


- Turn the outer ring clockwise a little.

The further you open the capsule, the more intense the fragrance.

Damp laundry and longer drying durations with sufficient heat transfer are needed for the fragrance to be released into the laundry effectively. The fragrance will also be noticeable in the room air during the process. The *Cold Air* program will not generally apply fragrance.

### After drying

To avoid the fragrance escaping needlessly:

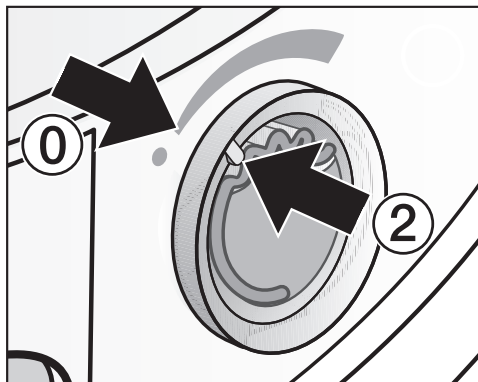

- Turn the outer ring counterclockwise until marker ② is in position ①.

You will feel a slight resistance.


If you want to run the drying cycle without the fragrance capsule from time to time

- Remove the fragrance capsule and store it in its original packaging.


# Fragrance capsule

## Replacing the fragrance capsule

When the fragrance is no longer sufficiently intense:

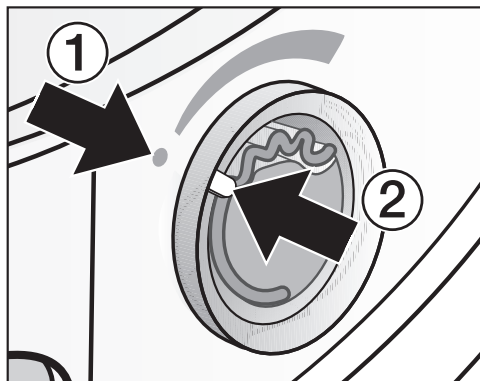


- Turn the outer ring counterclockwise until markers ① and ② line up.

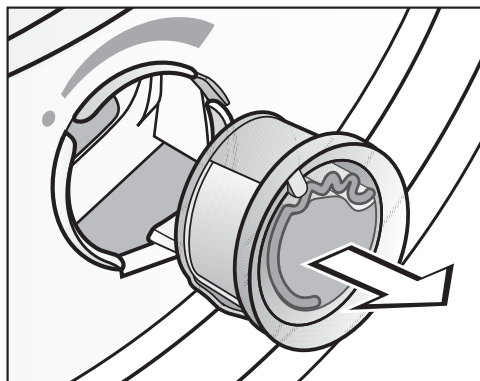


- Replace the fragrance capsule with a new one.

Fragrance capsules are available to order from Miele or online.

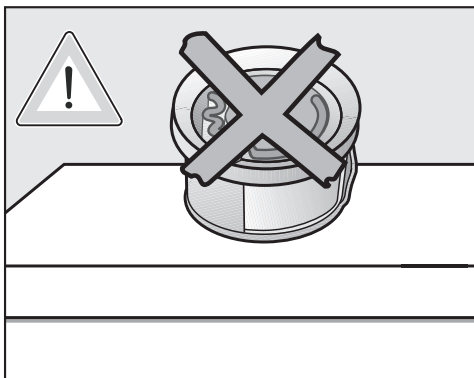

⚠ Never lay the fragrance capsule down on any surface as the fragrance will run out!

### Only store the fragrance capsule in its original packaging

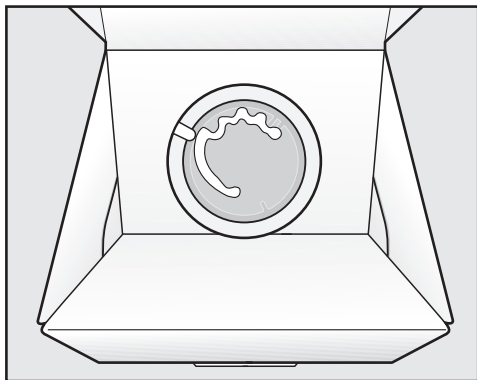

⚠ To prevent any fragrance running out of the capsule:

When not in use, the fragrance capsule must only be stored in its original packaging as illustrated!

- Clean the lint filters and the plinth filter: see “Cleaning and care”.

- When storing the fragrance capsule in its original packaging while you are not using it, e.g. while cleaning the tumble dryer: To prevent the fragrance running out, do not store the packaging upright on its edge or upside down.
- Store in a cool, dry place
- Store away from direct sunlight
- When purchasing new fragrance capsules: Only remove the protective seal just before use

### Cleaning the lint filters

The intensity of the fragrance will be diminished if the lint filters and the plinth filter are not cleaned!

⚠ The fragrance capsule must be removed before cleaning the lint filter.


# Cleaning and care

## Cleaning the lint filters

This tumble dryer has 2 lint filters in the door opening: The upper and lower lint filters trap lint produced during the drying process.

⚠ Clean the lint filters after each drying program.

This prevents an extension of the program duration.


⚠ Also clean the lint filters when Clean plinth filter. See  lights up. To turn the indicator light off: Switch the dryer off and then on again / if necessary, confirm with OK.

## Removing visible lint


**Useful tip:** You can also use a vacuum cleaner so that you can remove the lint without touching it.

■ Open the door.


⚠ You must remove the fragrance capsule (if present) beforehand. See “Fragrance capsule”.

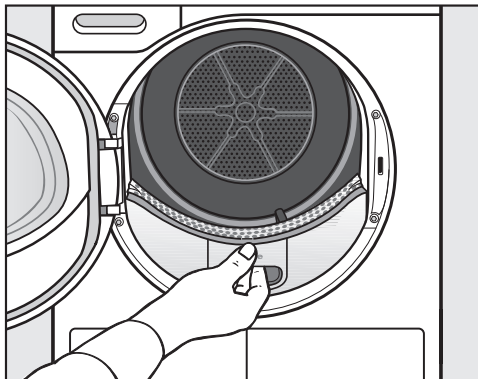

■ Pull the upper lint filter forward to remove it.

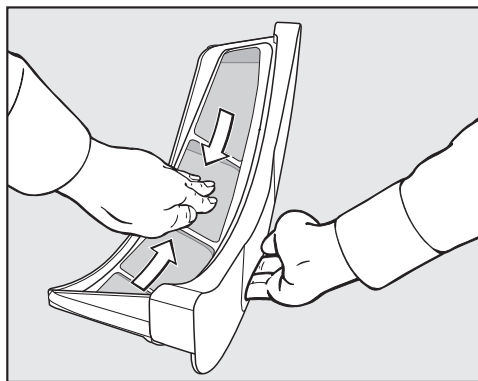

■ Remove the lint (see arrows).

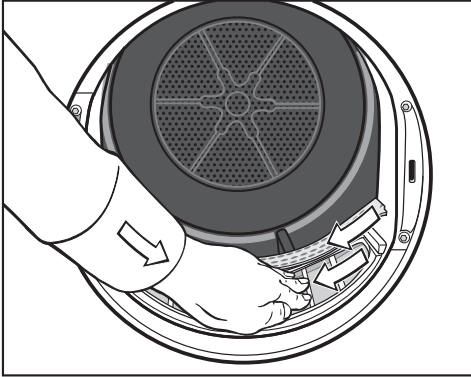


### Cleaning the lint filters and air flow openings thoroughly

⚠ If the drying duration has become longer or the surface of the filters is visibly compacted with lint, you should carry out the following cleaning procedure.


⚠ You must remove the fragrance capsule (if present) beforehand. See “Fragrance capsule”.

- Remove the lint (see arrows) from the filter surface of all the lint filters and the perforated laundry deflector.
- Push the upper lint filter back into position until it clicks.
- Close the door.

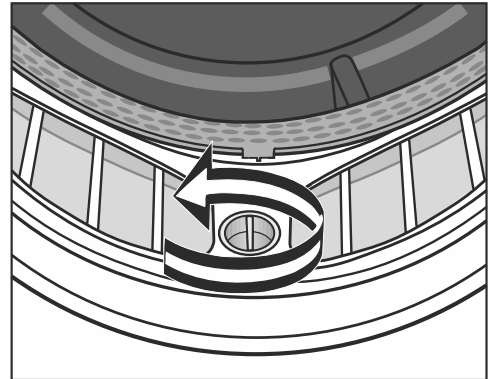


- Turn the yellow dial on the lower lint filter in the direction of the arrow (until you hear it click).

## Cleaning and care

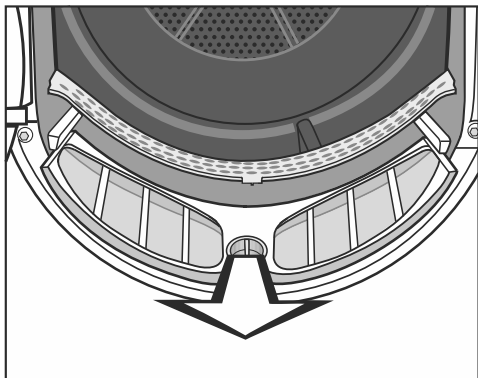

- Hold the dial and pull the lint filter forward to remove it.

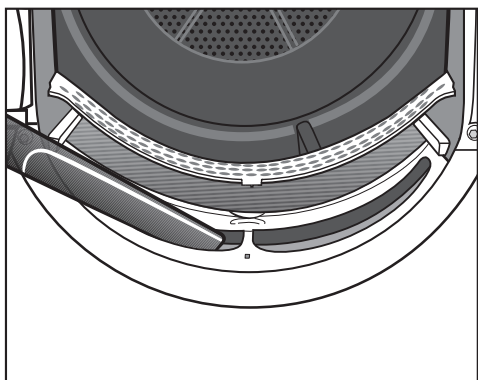


- Use a vacuum cleaner with a long crevice nozzle attached to remove any visible lint from the upper air flow openings.

Finally, clean the lint filters with water.

### Cleaning the lint filters with water

- Wipe the smooth plastic surfaces of the lint filters with a damp cloth to clean them.
- Flush the lint filters through with warm running water.
- Shake the lint filters thoroughly and then dry them carefully.


 Ensure the filters are dry before replacing them. Wet filters could cause operational faults!

- Push the lower lint filter in completely and lock it with the yellow dial.
- Push the upper lint filter in completely.
- Close the door.




## Cleaning instructions when using fabric softener sheets

If you are using fabric softener sheets, please follow these warnings and instructions.

 First, clean the filters as described in “Cleaning the lint filters with water”.

If the surfaces of the lint filters are still strongly compacted with lint, then follow these measures.

Please note the plastic and surfaces of the lint filters can be damaged by the cleaning process described below!

 If the surfaces of the lint filters are not cleaned, this can extend the drying time and increase the energy consumption.

Try the following 3 cleaning instructions to determine the one that achieves the best results.

### Option 1

- Wipe the surfaces of the lint filters several times with a cleaning cloth with an alcohol base until you have removed the impurities/obstructions.

 Risk of fire!


Then rinse the filter surfaces thoroughly with warm water to remove all residues.

### Option 2

- Clean the lint filters in the dishwasher without any other dishes. Use a high-temperature program (at least 70 °C).

### Option 3


- Wet the surfaces of the lint filters with a liquid colour detergent (e.g. Miele Ultra Colour Liquid Laundry Detergent).
- Leave it on for approx. 2 hours.

 Risk of fire!

Then rinse the filter surfaces thoroughly with warm water to remove all residues.


## Cleaning and care

### Cleaning the plinth filter

⚠ Clean the plinth filter whenever the Clean plinth filter. See  lights up or when the program duration is longer than usual.


To turn the indicator light off: Switch the dryer off and then on again / if necessary, confirm with OK.

### Removing the plinth filter

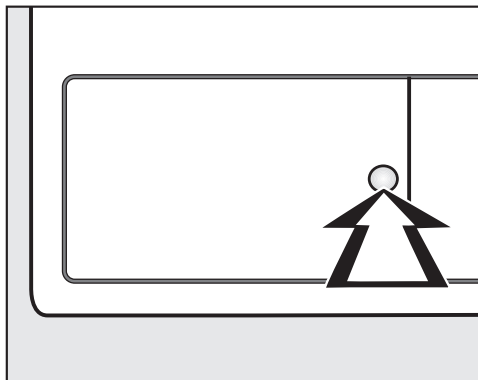

- Press the round, indented area on the heat exchanger access panel to open it.


The flap will spring open.

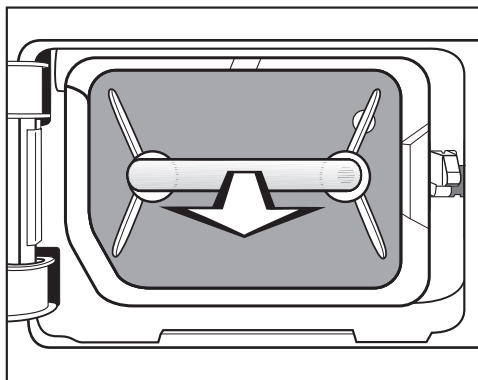

- Pull the plinth filter out by the handle.

This causes the right-hand guide pin in the dryer to come out. This pin ensures that the heat exchanger access panel can only be closed if the plinth filter is inserted the right way round.

## Cleaning the plinth filter

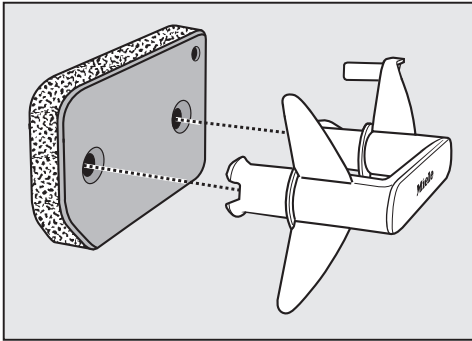


- Pull the handle out of the plinth filter.
- You can brush off a heavy build-up of lint on the plinth filter or remove it with a vacuum cleaner.
- Clean the plinth filter thoroughly under clear, running water.

⚠ Do not add any chlorine-containing cleaning agents or detergents to the water. In the long run, these detergents could damage the plinth filter material and make it brittle.

⚠ The plinth filter must not be replaced dripping wet. This can cause a fault!

- Carefully squeeze the water out of the plinth filter.
- Use a damp cloth to remove any lint from the handle.

## Cleaning the plinth filter flap

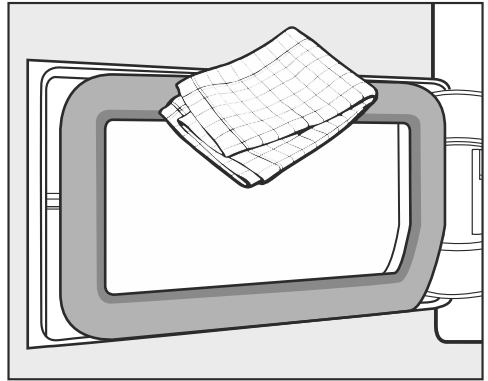

- Use a damp cloth to remove any lint. Make sure that you do not damage the rubber seal when doing this!
- Check whether the cooling fins are blocked with lint (as follows).

# Cleaning and care


## Checking the heat exchanger unit

**⚠ Danger of injury! Do not touch the cooling fins with your hands. You could cut yourself.**

- Look to see if lint has accumulated.


If there is visible soiling:

**⚠ Clean using a vacuum cleaner with a dusting brush attached. Only pass the vacuum cleaner brush over them lightly, without applying any pressure. Take care not to bend the cooling fins out of shape or to damage them!**

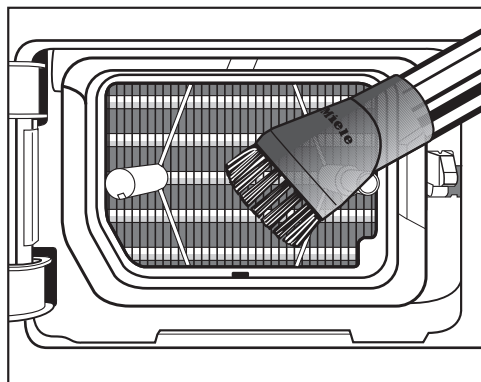


- Carefully vacuum up any visible lint or dirt.

## Replacing the plinth filter

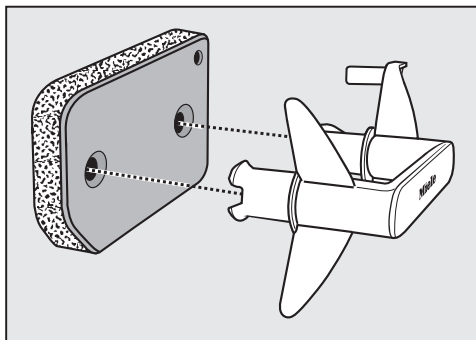

- Fit the filter back on the handle. Make sure it is the correct way round.

To ensure that the filter is positioned correctly in the front of the heat exchanger unit:

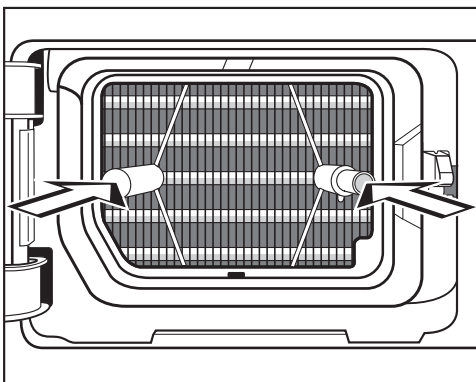


- First insert the handle with the plinth filter attached over the two guide pins:

– The word Miele on the handle must be the correct way up!


- Push the plinth filter in completely.


The act of pushing in the plinth filter will also push in the right-hand guide pin.


- Close the heat exchanger flap.

 The dryer can only be operated with the plinth filter fitted correctly and the heat exchanger access panel closed. The access panel must be closed correctly to ensure that water cannot leak from the condenser system and to ensure that the dryer functions efficiently!

### Cleaning the dryer

 Disconnect the tumble dryer from the electrical supply.

 Do not use any solvents, abrasive cleaners, glass cleaners or all-purpose cleaners! These could damage plastic surfaces and other parts.

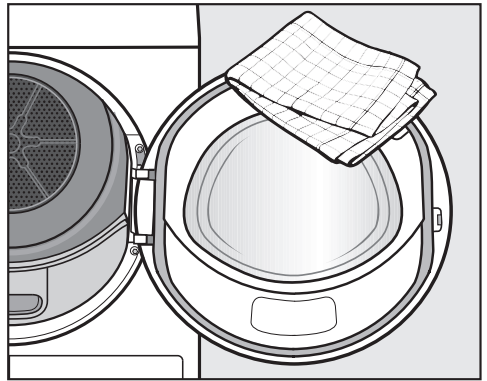

- Clean the tumble dryer and the seal on the inside of the door with a slightly damp soft cloth and a mild non-abrasive cleaning agent or a solution of dish soap and water.
- Dry all the parts with a soft cloth.





## Frequently Asked Questions

With the help of the following guide, minor faults in the performance of the machine, some of which may result from incorrect operation, can be remedied without contacting the Service Department. This will save you time and money because you won't need a service call.







This guide may help you find the reason for the fault and help you correct it.

Some of the messages in the display are more than one line long. Touch the  $\vee$  or  $\wedge$  sensor button to read them in full.

### The display indicates the following messages or faults

Message	Possible cause and remedy
000 lights up after switching on.	Access via a PIN code has been activated. ■ You can enter the code. See "Settings, PIN Code".
End / Cooling down	The laundry will be cooled down at the end of the program. ■ Either remove the laundry and spread it out to cool down or leave it in the tumble dryer to cool down during the cooling phase.
 Clean plinth filter. See  lights up at the end of a program.	There is a build-up of lint in the airways. ■ Clean the lint filters. ■ Clean the plinth filter. See "Cleaning and care". To switch off the message: ■ Confirm with OK.
 Clean plinth filter. See  lights up after a program has been interrupted.	An excessive amount of lint has built up. ■ Clean the lint filters. ■ Clean the plinth filter. ■ Clean the air duct area underneath the plinth filter. ■ Clean the heat exchanger. To switch off the message: ■ Switch the dryer off and then on again.

## Frequently Asked Questions

Message	Possible cause and remedy
 Empty container. See  <b>lights up after a program has been interrupted.</b>	<p>The condensed water container is full or there is a kink in the drain hose.</p> <ul style="list-style-type: none"> <li>■ Empty the condensed water container.</li> <li>■ Check the drain hose.</li> </ul> <p>To switch off the message:</p> <ul style="list-style-type: none"> <li>■ Open and close the door while the dryer is switched on or switch the dryer off and back on again.</li> </ul>
 Blockage detected. See  <b>lights up after a program has been interrupted.</b>	<p>The laundry is unevenly distributed or has rolled up.</p> <ul style="list-style-type: none"> <li>■ Open the door and untangle the laundry, and remove a few items, if necessary.</li> <li>■ Switch the dryer off and then on again.</li> <li>■ Start a program.</li> </ul>
  Service Fault F XXX <b>lights up after a program has been interrupted.</b>	<p>There is no obvious cause.</p> <ul style="list-style-type: none"> <li>■ Switch the dryer off and then on again.</li> <li>■ Start a program.</li> </ul> <p>If the program is interrupted again and an error message appears, there is a fault. Contact Miele Technical Service.</p>

## Frequently Asked Questions

---

### Unsatisfactory drying results

Problem	Possible cause and remedy
<b>The laundry is not sufficiently dry.</b>	<p>The load consisted of different types of fabric.</p> <ul style="list-style-type: none"><li>■ Finish drying using the <i>Time Dry</i> program.</li><li>■ Select a more suitable program next time.</li></ul> <p>Tip: You can alter the residual moisture level for some programs. See “Settings”.</p>
<b>The laundry or feather-filled pillows develop a smell after drying.</b>	<p>The laundry was washed with insufficient detergent. Feathers have the property of developing a significant odour when they are warm.</p> <ul style="list-style-type: none"><li>■ Laundry: use sufficient detergent</li><li>■ Pillows: take out of the tumble dryer and air them</li><li>■ Use a fragrance capsule (available as an optional accessory) for your favourite fragrance.</li></ul>
<b>Items made of synthetic fibres are charged with static electricity after drying.</b>	<p>Synthetic fibres tend to attract static charge.</p> <ul style="list-style-type: none"><li>■ Static charge can be reduced by adding a fabric softener to the final rinse in the washing program.</li></ul>
<b>There is a build-up of lint.</b>	<p>Lint is principally the result of friction when garments are being worn and to some extent when they are being washed. Machine drying hardly causes any lint to form.</p> <p>Lint is collected by the lint filters and the plinth filter and can be removed easily.</p> <ul style="list-style-type: none"><li>■ See “Cleaning and care”.</li></ul>



## Frequently Asked Questions


### The drying cycle duration is very long

Problem	Possible cause and remedy
<b>The drying process goes on too long or even switches off.*</b>	The room in which the tumble dryer is located is too warm. ■ Ventilate the room thoroughly.
	Detergent residues, hair and fine lint can clog the filters. ■ Clean the lint filters and the plinth filter. ■ Remove visible lint: ... on the bottom left, behind the flap in the heat exchanger cavity (see “Cleaning and care”); ... at the bottom right of the cooling fins behind the grille (see the end of this section).
	The laundry is unevenly distributed or has rolled up. The tumble dryer has been overloaded. ■ Untangle the laundry and remove a few items. ■ Start a program.
	The cold air intake (bottom right grille) is blocked. ■ Move any objects such as a laundry basket away from the dryer.
	The lint filters and the plinth filter were wet when replaced. ■ The lint filters and the plinth filter must be dry.
	The laundry is too damp. ■ Spin using a higher spin speed in the washing machine.
	Metallic components, e.g. zippers, have prevented the dryer from registering the correct moisture level. ■ Open the zippers next time. ■ If the problem recurs, dry these items using the <i>Time Dry</i> timed drying program.

\* Switch the tumble dryer off and on again before starting a new program.

# Frequently Asked Questions

## General problems with the tumble dryer

Problem	Possible cause and remedy
<b>You can hear operating noises (buzzing/humming).</b>	This is not a fault! The compressor (heat pump) is operating. ■ No action required. These noises are quite normal and can be heard when the compressor is operating.
<b>A program does not start.</b>	There is no obvious cause. ■ Connect the power plug. ■ Turn on the tumble dryer. ■ Close the door. ■ Check whether the fuse has tripped.
	Power outage? When power is restored, any previously running program will restart automatically.
<b>The display is dark and the <i>Start/Stop</i> button is flashing slowly.</b>	The display has switched off automatically to save energy (Standby mode). The drum will turn at intervals in the anti-crease phase. ■ Press any button. Standby will end.
<b>The tumble dryer is switched off at the end of the program.</b>	The tumble dryer switches off automatically. This is not a fault, but a normal function. ■ See “Settings, Appliance switch-off”.
<b>The display is in a different language.</b>	A different language has been selected in “Settings, Language  <p>58</p>


## Frequently Asked Questions

### Bottom right grille

⚠ In general, the cooling fins behind the grille on the bottom right do not need cleaning. They should only be cleaned if the drying process is taking an exceptionally long time due to a very high level of dust or lint in the room in which the dryer is located!

- First open the flap for the plinth filter (bottom left).

To remove the grille, the catch underneath it needs to be released using a teaspoon.

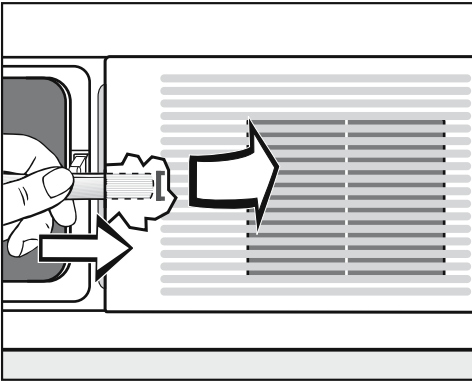


- Insert a spoon handle underneath the grille in the middle.
- Press the spoon handle against the catch and lever the grille open.
- Remove the grille.

⚠ Danger of injury! Do not touch the cooling fins with your hands. You could cut yourself.

⚠ Clean using a vacuum cleaner with a dusting brush attached. Only pass the vacuum cleaner brush over them lightly, without applying any pressure.

Take care not to bend the cooling fins out of shape or to damage them!

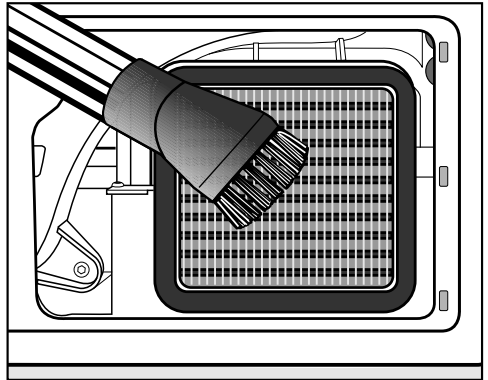

- Carefully vacuum up any visible lint or dirt.
- Re-insert the three hooks on the grille into the appropriate holes in the front of the dryer.
- Press the grille firmly back into position by pressing it in at the middle on the left.

# Service

---


## Contact in case of a fault

In the event of any faults which you cannot remedy yourself, please contact your Miele Dealer or the Miele Service Department.

Contact information for Miele Service can be found at the end of this document.

Please quote the model and serial number of your appliance when contacting Miele. This information can be found on the data plate.

Open the door of your tumble dryer to find the data plate:

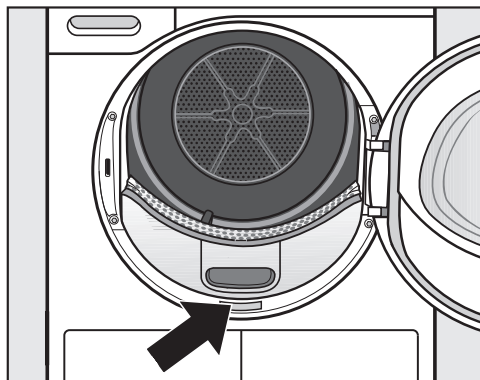

## Warranty

For further information, please refer to your warranty booklet.

## Optional accessories

Optional accessories for this tumble dryer are available from Miele Technical Service.

You also can order these and many other useful products from the Miele online shop or Miele Experience Centers.


## Dryer basket

The dryer basket enables items which must not be subjected to mechanical action to be dried or aired.

## Fragrance capsule

A fragrance capsule can be used in your tumble dryer to add a pleasant fragrance to your laundry.

## Installation instructions

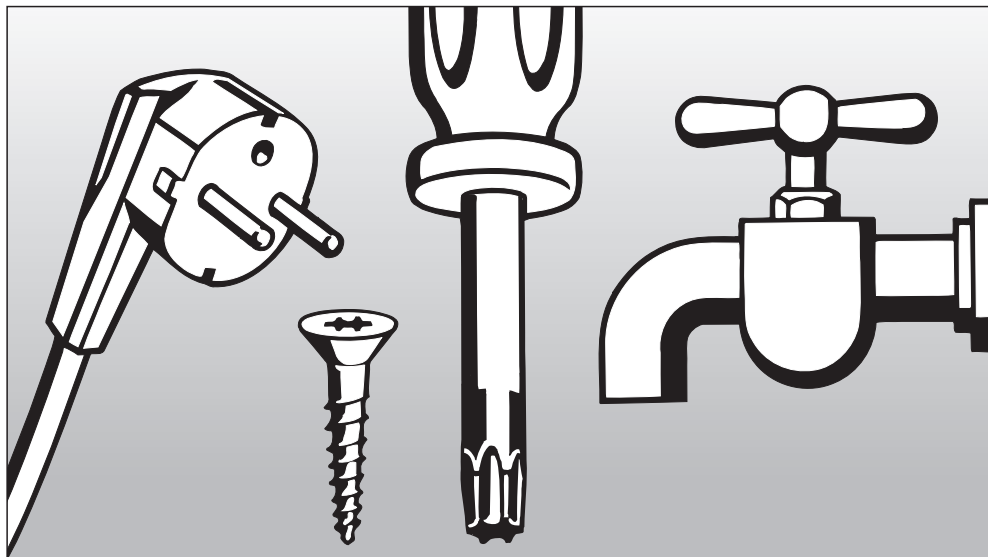

Alteration rights reserved.

Visit our website for all the current product specifications, technical appliance information, and warranty information.

To avoid accidents or damage to the appliance, please read these instructions before installing and/or using it.

## WARNING AND SAFETY INSTRUCTIONS

---

### **WARNING – Fire hazard**

- ▶ Follow the installation instructions in order to reduce the risk of serious or fatal injury.
- ▶ The installation of the tumble dryer must be carried out by a qualified specialist.
- ▶ The tumble dryer must be installed in accordance with local regulations.
- ▶ Unauthorized repairs could result in unforeseen dangers for the user, for which Miele cannot accept liability. Repairs should only be carried out by a Miele approved service technician, otherwise any subsequent damage will not be covered by the warranty.
- ▶ In the event of a fault or during cleaning and maintenance, the tumble dryer is only completely disconnected from the electricity supply when the tumble dryer plug has been removed or if the fuse has been disconnected or if the screw-out fuse has been removed. Do not switch on the supply until the task has been completed.

### ▶ **GROUNDING INSTRUCTIONS**

The electrical safety of this dryer can only be guaranteed when continuity is complete between it and an effective grounding system. It is essential that this standard safety requirement is observed and regularly tested. If in any doubt, please have the electrical installation inspected by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate grounding system. The electrical socket must be easily accessible so that the dryer can be disconnected from the electricity supply.

- ▶ **WARNING** – If the grounding conductor is connected incorrectly, this can result in electric shock. Contact a qualified electrician if you are unsure whether the appliance is properly grounded.
- ▶ Do not change the plug: If it does not fit into the socket, you should have a proper outlet installed by a qualified electrician.

## WARNING AND SAFETY INSTRUCTIONS

---

- ▶ Do not connect the dryer to the domestic electricity supply by a multi-socket adapter, extension cord or similar. These do not guarantee the required safety of the machine (fire hazard due to the risk of overheating).
- ▶ This tumble dryer may only be operated in non-stationary locations (e.g. on ships) if the installation has been carried out by a qualified installer or a service agency in strict accordance with national and local safety requirements and standards.
- ▶ Do not install the tumble dryer in a room where there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
- ▶ Should you have any questions regarding installation, please get in touch at:

### **USA**

1-800-999-1360 techserv@mieleusa.com


### **CDN**

1-800-565-6435 service@miele.ca

**KEEP THESE OPERATING INSTRUCTIONS IN A SAFE PLACE**

# Installation and connection


## Front view

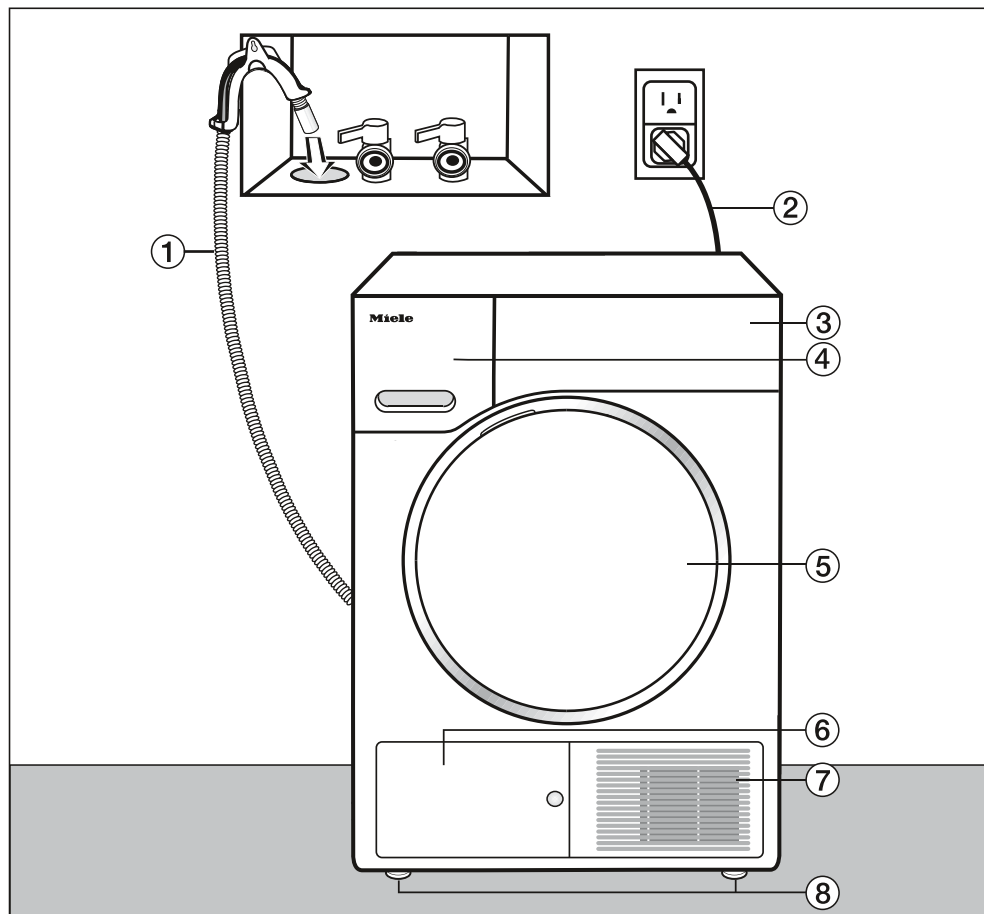

- |  |   |
|--|---|
| ① Drain hose for condensed water                             | ⑤ Door  |
| ② Power cord   | – do not open during drying                                 |
| – ⚠ Observe the section entitled<br>“Electrical connection”! | ⑥ Access panel to the heat exchanger<br>and plinth filter   |
| ③ Control panel  | – do not open during drying                                 |
| ④ Condensed water container                                  | ⑦ Cold air intake grille                                    |
| – empty after every drying cycle                             | – do not obstruct with a laundry<br>basket or other objects |
|  | ⑧ four height-adjustable screw feet                         |



## Rear view

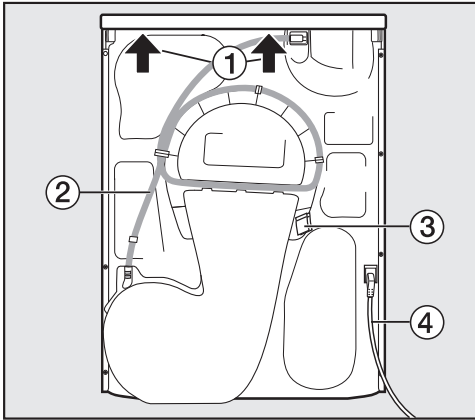


- ① Protruding lid for holding when moving the tumble dryer (see arrows)
- ② Drain hose for condensed water
- ③ Hook for winding the power cord during transport
- ④ Power cord

## Transporting the tumble dryer

⚠ Only transport the tumble dryer as illustrated.

This will prevent the tumble dryer from being damaged.

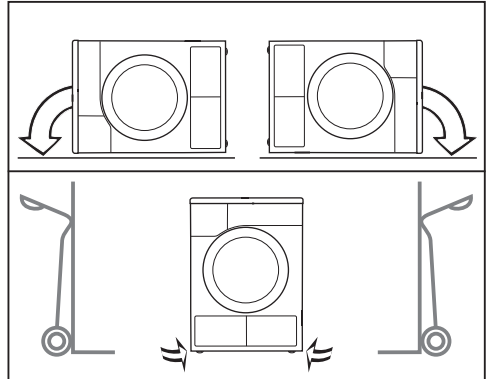

- If the tumble dryer is being transported on its side, it must be tipped onto its left or right side.
- If the tumble dryer is being transported upright and you are using a hand truck, you must transport it with its left or right side resting on the truck.

## Transporting the tumble dryer to its installation site

⚠ The fixings at the back of the lid may become brittle due to external circumstances.

There is a danger of the lid being pulled off when carrying the appliance.

Before carrying the appliance, check that the lid is secure where it protrudes at the back of the appliance.

- Carry the tumble dryer by the front feet and by the lid where it protrudes at the back of the appliance.


# Installation and connection

## Installation


### Installation

#### Levelling the tumble dryer

⚠ Ensure that no closeable door, sliding door or an oppositely hinged door is installed that would hinder the door of the dryer being opened in any way.

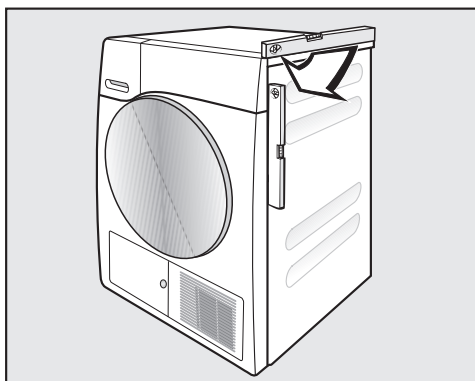

The appliance must stand perfectly level to ensure safe and proper operation.

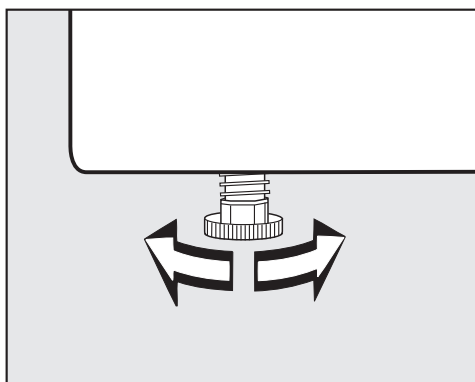

The screw feet can be adjusted to compensate for unevenness in the floor.

### Downtime after installation

⚠ After installation, downtime of 1 hour is required before connecting the tumble dryer to the electricity supply.

Otherwise, the heat pump could be damaged.

### Ventilation

⚠ The cold air intake at the front of the dryer must not be blocked or covered! This would hinder a sufficient intake of cold air for the heat exchanger.

⚠ Do not block the gap between the bottom of the tumble dryer and the floor with toe-kicks, deep pile carpet etc. This would otherwise hinder a sufficient flow of air to the tumble dryer.

The hot air that is blown out from the heat exchanger warms the room air. Ensure sufficient ventilation of the room: e.g., open the window. The drying time will otherwise take longer (higher energy requirement).

### Before moving the tumble dryer again

A small quantity of condensed water that remains in the area around the pump after the drying process can run out if the dryer is tilted.

Recommendation: Start the *Time Dry* program for approx. 1 minute before transporting the dryer. Any remaining condensed water will then be fed into

# Installation and connection

the condensed water container (which you will need to empty again) or out through the drain hose.

## Additional installation requirements

⚠ All installations must be carried out in accordance with local regulations.

### Slot-in

This tumble dryer is suitable for pushing under a countertop.

⚠ It is very important to avoid a build-up of heat. The warm air which is expelled from the dryer must be able to dissipate. Warm air which cannot dissipate could cause a fault!


- The appliance lid must not be removed.
- The electrical socket must be located in an accessible position near the tumble dryer.
- Drying durations may increase slightly.

## Installing the dryer in a closet

### Minimum installation distance

⚠ You must insert sufficiently large ventilation openings into the closet door. You can also open the closet door slightly while the dryer is operating.

Otherwise, the dryer can overheat, which can cause a fault!

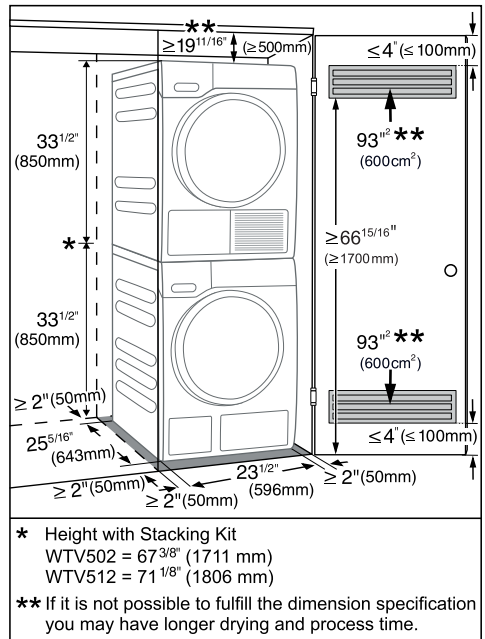

⚠ Ensure that the dryer door can be opened at any time. Ensure that the laundry can be removed at any time without hindrance.


# Installation and connection

---


## Installing the dryer in a floor-to-ceiling closet

You can also insert a ventilation opening at the top of the closet. In addition, you must also provide an opening on the bottom side of the closet door.

Direct ventilation is also possible via an air conditioning outlet in the closet.


 The air must be able to circulate freely at the top of the closet.

The air supply must not be hindered by an additional closet or shelf!

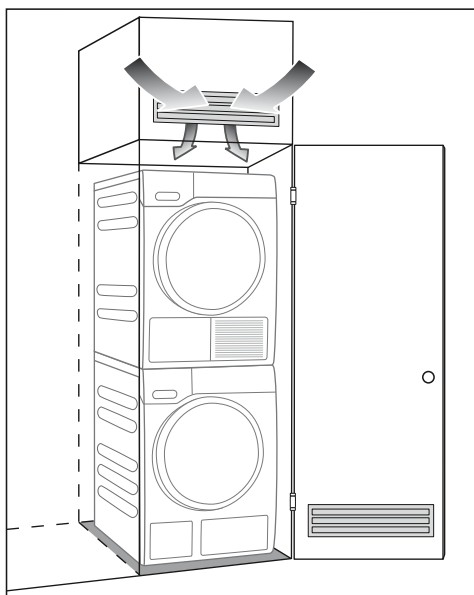

## Product dimensions


### Dimensions

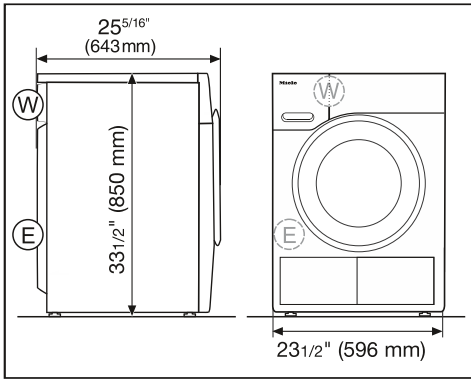

- Ⓜ 1.60 m drain hose, detachable, top right on the rear
- ⓔ 2 m wiring, bottom right on the rear


### Washer-dryer stack

– WTV502 or WTV512

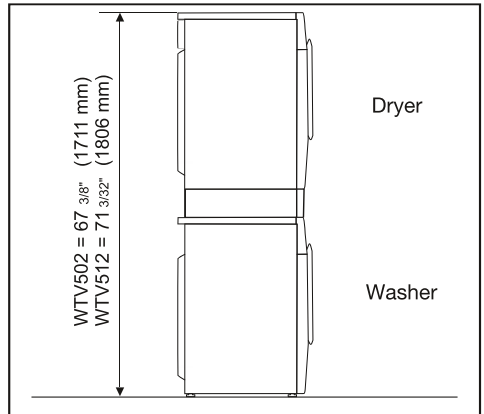

### Installation on a plinth

– WTS 510

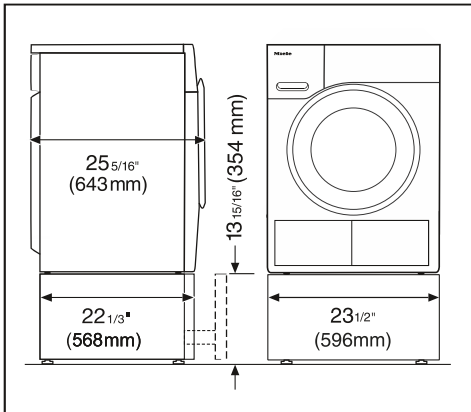

# Installation and connection

## Electrical connection

### GROUNDING INSTRUCTIONS


The electrical safety of this dryer can only be guaranteed when continuity is complete between it and an effective grounding system. It is essential that this standard safety requirement is observed and regularly tested. If in any doubt, please have the electrical installation inspected by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate grounding system. The electrical socket must be easily accessible so that the dryer can be disconnected from the electricity supply.

**WARNING** – If the grounding conductor is connected incorrectly, this can result in electric shock. Contact a qualified electrician if you are unsure whether the appliance is properly grounded.

Do not change the plug: If it does not fit into the socket, you should have a proper outlet installed by a qualified electrician.


The dryer is equipped with a 6' 7" (2 m) power cord with plug. The dryer is connected to a NEMA 5-15 socket with an electrical connection of 120 V, 60 Hz, 15 A.

## Connection adapter for NEMA 14-30 socket

 If a NEMA 14-30 socket is provided on-site for the dryer, the Miele connection adapter\* can be used.

Observe the following description to avoid damage to the dryer.

**Useful tip:** You can order the connection adapter directly from Miele (USA or CDN).

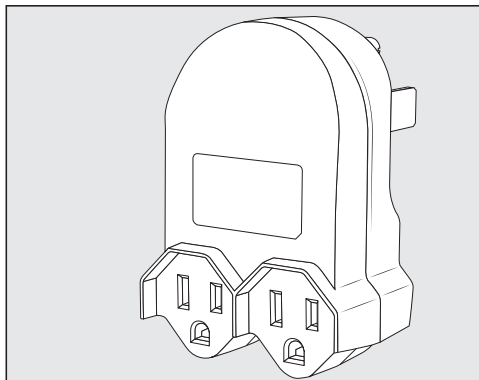

- The connection adapter has a NEMA 14-30 plug and two NEMA 5-15 socket-side connectors. The dryer and washing machine can therefore be connected to the 120 V / 60 Hz electricity supply.
- The connection adapter is equipped with two 15 A fuses which protect both the connected appliances and the connection adapter.

## External draining of condensed water

### Note

When drying is in progress, condensed water is pumped into the condensed water container through the drain hose which is located at the back of the dryer.

The condensed water can also be externally drained away via the drain hose on the back of the dryer. This means that the condensed water container no longer has to be emptied.


Drain hose length: 1.60 m  
Maximum delivery head: 1.50 m  
Maximum drain hose length: 4.00 m

### Arranging the drain hose

⚠ Do not pull on the drain hose and do not stretch it or allow it to become kinked.

This could damage the hose!

There will be a small amount of residual water left in the drain hose. Have a container ready to collect this.

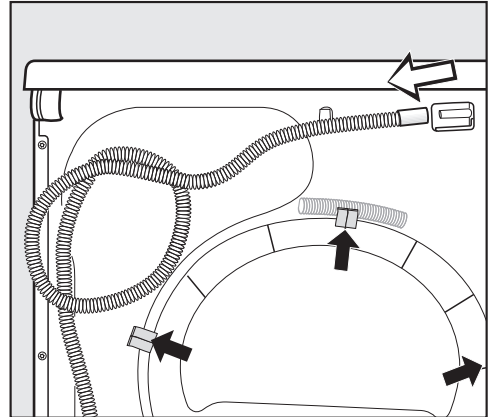

- Pull the drain hose off its connection (light arrow).
- Pull the hose out of the holders (dark arrow) and unwind it.
- Allow any residual water to run into a container.

### Condensate drain

The drain hose on the back of the dryer can be inserted into the drainage mechanism.

- Attach the end of the hose to the drainage mechanism.

⚠ Secure the drain hose carefully (e.g. by tying it) to make sure it cannot slip.

Overflowing water can cause damage.

# Installation and connection

## Changing the door hinging

You can change the door hinging on this tumble dryer yourself.

For safety reasons, the tumble dryer must be disconnected from the electricity supply before changing the door hinging.


You will need:

- a Torx T20 and T30 screwdriver
- a flat head screwdriver or pointed pliers
- the lock catch cover supplied
- the door hinge cover supplied
- a soft surface (e.g. a blanket)

### Changing the hinging over

#### 1. Remove the door from the tumble dryer

- Open the door.

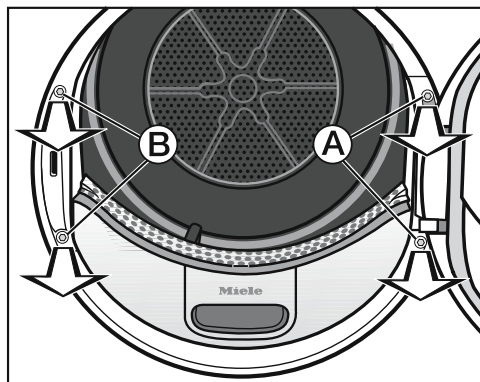

- Use a T30 Torx screwdriver to unscrew the two screws on the base plate of the door hinge (A).


The door cannot fall off.

- Hold the door securely and pull it forwards: to remove the door you will need to pull the base plate of the hinge with its 2 pins out of the dryer.

⚠ To avoid scratching the door, place it outer side downwards on a soft surface (e.g. a blanket).

#### 2. Change over the door lock on the dryer

- Use a Torx T30 screwdriver to unscrew the two screws on the door lock (B).

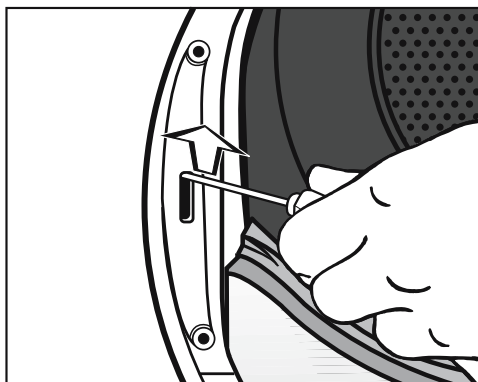


- Use the screwdriver to press the door lock upwards.

The door lock will spring out of its position and can then be removed.




- Turn the door lock by 180°.

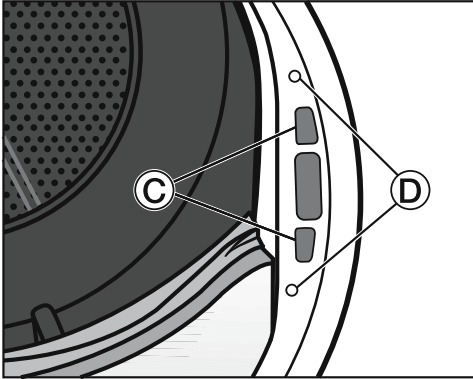


- Press the door lock into the openings ③ on the opposite side of the door opening.
- Adjust the position of the door lock so that the screw holes line up with those in the front panel of the dryer ④.
- Screw in both Torx screws in order to secure the door lock.

### 3. Remove the lock catch from the door

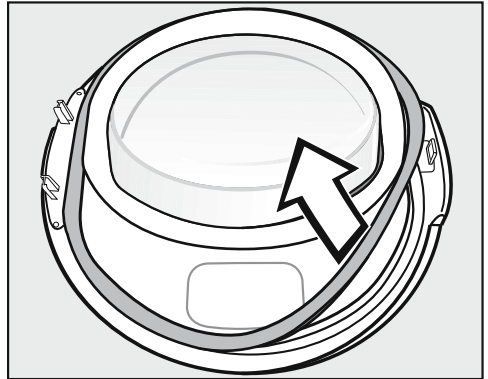


- First take the rubber seal off the door and place this to one side.

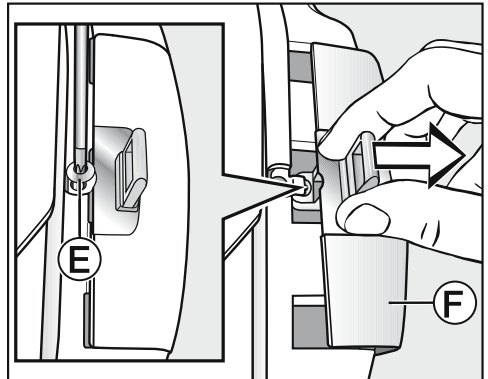


- Use a T20 Torx screwdriver to remove screw ⑤ on the lock catch.
- Pull off the lock catch together with the lock catch cover ⑥.

## Installation and connection

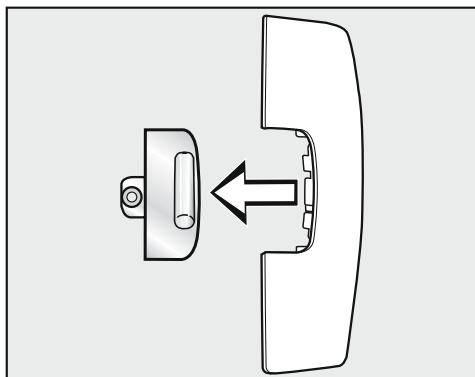

- Remove the lock catch from the cover.


This lock catch cover is no longer needed.

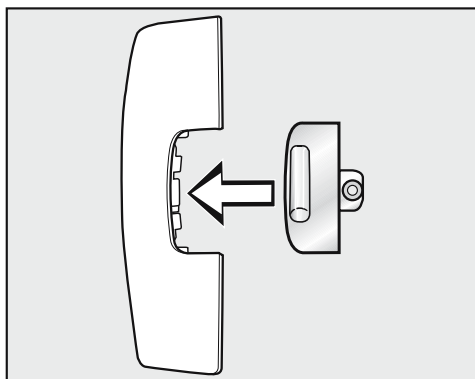

- Insert the lock catch into the new cover supplied with the dryer.
- Place this new lock catch cover to one side for now.

### 4. Dismantle the door hinge from the door

The door hinge cover must be unclipped from position ⑥ and then removed.

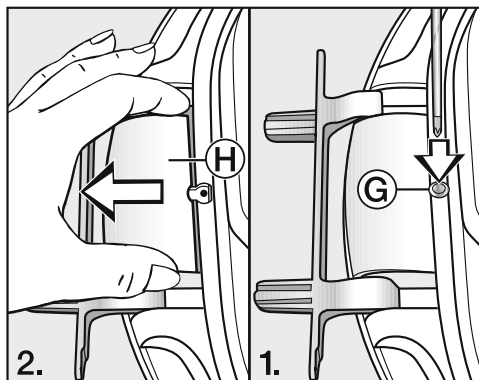


- Use a screwdriver to press down gently on position ⑥ on the door hinge cover.
- Using a little force, pull out door hinge cover ⑦.


This door hinge cover is no longer needed.

## 5. Change the door hinge on the door

The door hinge is secured to the door with 2 angled rods. These rods need to be removed with a screwdriver or pointed pliers.

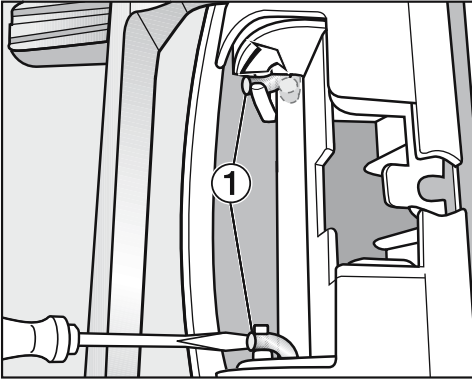


- Insert the end of the screwdriver blade under rod ① and rotate it so it is in an upright position. Do the same to the other rod.

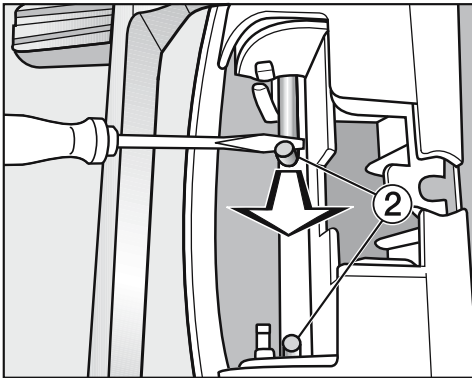

- Use the screwdriver or pointed pliers to guide first one then the other rod ② to the middle until each can be removed.


**Useful tip:** In some circumstances, the rods can be difficult to dislodge. Moving the screwdriver with a levering action while pulling at the same time may help to work the rods free.


- Remove the door hinge and turn it through 180°.
- Refit the door hinge on the opposite side of the door.

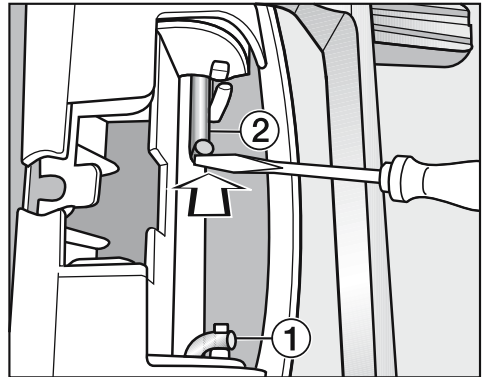

- Secure the door hinge with the two rods ②.
- Position the screwdriver under the end of the rod and then push it into its resting position ①.


## Installation and connection


 You now need the new door hinge cover supplied with the dryer.

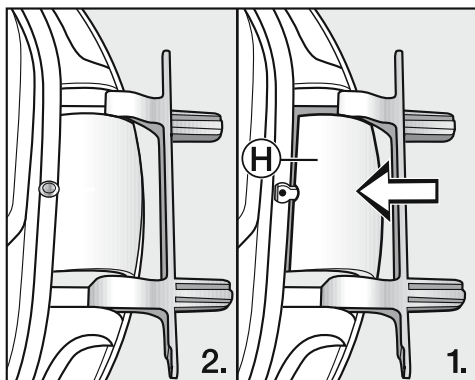

- Fit new door hinge cover **H** and clip it into position.

### 6. Change the lock catch on the door


 You now need the new lock catch cover supplied with the dryer which you have already fitted with the lock catch.

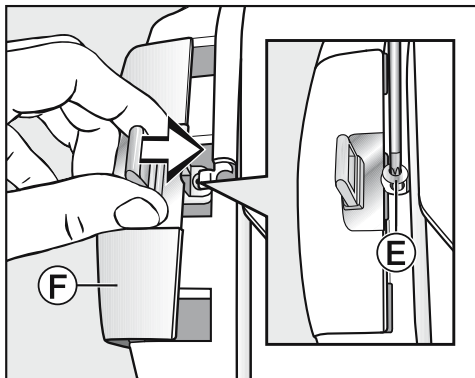

- Push the lock catch cover **F** with its lock catch into position.
- Tighten the screw **E**.


## Refitting

### 7. Refit the door

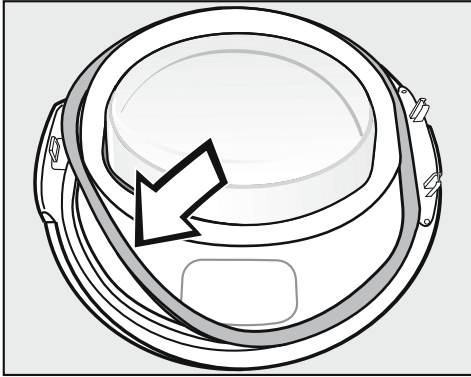


- Press the rubber seal back into the groove on the door.
- Position the door in front of the dryer.
- Fit the base of the door hinge with its 2 pins into the openings on the dryer.

The base of the door hinge must be flush with the front panel of the dryer. The door cannot fall off in this position.

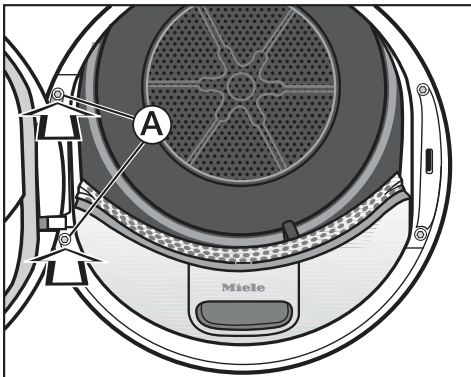

- Screw the door securely to the dryer at the base of door hinge (A).

**!** Now that you have changed the door hinging, the door will open from the opposite side.

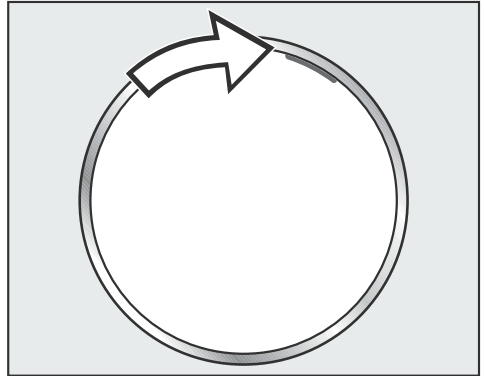

- Push the orange marker round to the other side so that you will see at which side to pull the door open.

**!** Please keep the lock catch and door hinge covers which were no longer needed in a safe place. These will be required if, for example, you move to a new house and need to change the door hinging back to its original position.

## Technical data

---

Height	33 7/16" (850 mm)
Width	23 7/16" (596 mm)
Depth	25 5/16" (643 mm)
Depth with door open	42 3/8" (1077 mm)
Slot-in	Yes
Stackable	Yes
Weight	Approx. 137 lbs (62 kg)
Drum volume	31.7 gal (120 L)
Load quantity	17.6 lb (8 kg) dry laundry
Capacity of condensed water container	1.27 gal (4.8 L)
Hose length	63" (1.60 m)
Maximum head height	59" (1.50 m)
Maximum drain hose length	157 1/2" (4.00 m)
Length of connection cable	78 3/4" (2.00 m)
Connection voltage	See data plate
Connected load	See data plate
Fuse	See data plate
Test certificates awarded	See data plate
LEDs	Class 1
Frequency band	2.412 GHz – 2.462 GHz
Maximum transmitting power	< 100 mW

## Calling up settings

You can alter the tumble dryer's electronics to suit changing requirements with the settings. The settings can be altered at any time.

- Turn the program selector to *More programs*/⚙️.



- Touch the  $\wedge$  sensor button once.

The following appears in the display:



- Confirm with the *OK* sensor button.



You are now in the *Settings* submenu.

## Selecting settings

- Touch the  $\vee$  or  $\wedge$  sensor buttons until the setting you want appears in the display.
  - The  $\vee$  sensor button scrolls down the list.
  - The  $\wedge$  sensor button scrolls up the list.
- Touch the *OK* sensor button to select the setting displayed.

## Changing a setting

- Touching the  $\vee$  or  $\wedge$  sensor buttons will call up the different options for the setting.

For example, you can

- select a value (if the option is marked with  $\checkmark$ , it is active),
- change a bar chart,
- change numbers.
- When the option you want appears in the display, touch the *OK* sensor button to activate it.


## Closing the settings menu

- Turn the program selector.

# Settings

## Language

The display can be set to appear in one of several different languages.

The flag  after the word Language acts as a guide in case a language which is not understood is set.

The language selected is saved to memory.

## Drying levels

You can alter the drying levels for the *Normal* and *Wrinkle-free* programs.

### Options

- ■■■■■■■■ (Damper)  
The program duration is shorter
- ■■■■■■■■ (Factory default setting)
- ■■■■■■■■ (Drier)  
The program duration is longer

## Welcome

The volume of the switch-on signal tone can be changed.

### Options

- Off
- ■■■■■■■■ (Quiet)
- ■■■■■■■■ (Factory default setting)
- ■■■■■■■■ (Loud)

## Keypad tone

When this setting is activated, a signal tone will sound each time a sensor button is touched.

### Options

- Off (factory default setting)
- ■■■■■■■■ (Quiet)
- ■■■■■■■■ (Loud)

In the case of a selection that is not allowed, a negative signal tone sounds.

## Buzzer volume

The buzzer sounds to let you know the program has finished. The buzzer can be set to be louder or quieter.



### Options

- ■■■■■■■■ (Quiet)
- ■■■■■■■■ (Factory default setting)
- ■■■■■■■■ (Loud)



## Airway indicator

Lint should be removed after drying. In addition, this indicator will remind you to clean the filters when a certain amount of lint has collected in them:



 Clean plinth filter. See 

You can decide at what level of lint this reminder should be given.

### Options

You will have an idea of how often this should be done after a few drying programs.

#### – Off

This reminder indicator does not appear. However, if there is a very severe blockage in the ducting, the program will be cancelled and the  Clean plinth filter. See  message will appear in the display regardless of this option.

#### – Heavy

The indicator only appears when there is a heavy build-up of lint.


#### – Normal (factory default setting)

#### – Light

The indicator appears when there is only a small build-up of lint.

## Conductivity

This setting is only relevant for regions with very low water hardness.

 You should only select this setting if the water used for washing the laundry is extremely soft with a conductivity reading (electrical conductivity) less than 150  $\mu\text{S}/\text{cm}$ . Contact your local water authority for the conductivity level of your domestic water supply. Otherwise drying results can be unsatisfactory!

### Options

#### – Normal (factory default setting)

#### – Low < 150 $\mu\text{S}$ (only for regions with very low water hardness)


# Settings

## Code

The PIN code prevents your dryer being used without your knowledge.

### Options

- Activate  
The code is 250 and can be activated.  
When the PIN code has been activated, you have to enter a code after switching the dryer on. Otherwise the dryer cannot be operated.
- Deactivate  
For using the dryer without entering the code. This only appears if the PIN code has been activated previously.
- Change  
You can enter a code of your own.

 Please note! Make a note of the new PIN code. If you forget the code, the dryer will need to be unlocked by Miele Technical Service.

## Brightness

The display and the sensor button lighting is switched off to save energy. The *Start/Stop* sensor button flashes slowly.

### Options

#### Display

Controls the brightness of the display.

- ■■■■■■■■ (Dark)
- ■■■■■■■■ (Light) (factory setting)

#### Button lighting on

Controls the brightness of the activated sensor buttons.

- ■■■■■■■■ (Dark)
- ■■■■■■■■ (Factory default setting)
- ■■■■■■■■ (Light)

#### Button lighting off

Controls the brightness of the sensor buttons that can be activated.

- ■■■■■■■■ (Dark) (default setting)
- ■■■■■■■■ (Light)

**Useful tip:** Ensure that there is a discernible difference in brightness between the activated and dimmed sensor buttons. This makes it easier to operate the appliance.

## Display switch-off

To save energy, the display and sensor buttons will go out after 10 minutes and the *Start/Stop* button will flash slowly. You can alter this setting.

### Options

- On (default setting)  
The display will go out (after 10 minutes):
  - if a program is not selected after the dryer has been switched on
  - during the current program
  - at the end of a program
- On (not in current program)  
The display will go out (as described above) but will remain on while the program is running.
- Off  
The display will remain on (i.e. it will never go out).

You can switch the display back on by touching any sensor button.

## Memory

The dryer saves the settings that were selected last for a drying program (drying stage and/or extra option, or the duration for some programs).

When the program is chosen again, the saved settings will appear in the display.

### Options

- Off (factory default setting)
- On

The activation of the delay start, the buzzer or the ECO feedback data are not saved.

## Anti-crease

After the drying cycle has finished, the drum will continue to rotate in a special Anti-crease rhythm. This helps to prevent creasing if the laundry is not removed immediately after the end of a program.

### Options

- 1 h
- 2 h (factory default setting)

## Program info

The program names and maximum load, which are lit in the display when the program is selected with the program selector, can be switched off.

### Options

- Off (program name and load are not displayed)
- Program name (the load is not displayed)
- Program name and max. load (both are displayed, default setting)

# Settings

---

## Miele@home

Control the networking of your dryer with your WiFi network.

The following points may appear in the submenu:

Set up

This message only appears if the dryer has not yet been connected to a WiFi network.

Please refer to “Initial commissioning” to set up the connection.

Deactivate (visible if Miele@home is activated)

Miele@home remains set up, the WiFi function is switched off.

Activate (visible if Miele@home is deactivated)

The WiFi function is reactivated.

Connection status (visible if Miele@home is activated)

The following values are displayed:

- The quality of WiFi reception
- The network name
- The IP address

Set up again (visible if set up)

Resets the WiFi login (network) to immediately re-establish a new connection.

Reset (visible if set up)

- The WiFi is switched off.
- The WiFi connection will be reset to the factory setting.

Miele@home is no longer set up. A new connection setup has to be carried out in order to use the Miele@home setting again.

## Remote control

The Remote control setting is only visible if the Miele@home setting is set up and activated.

Once the Miele@mobile app has been installed on your mobile device, you can check the status of your tumble dryer from anywhere and start it remotely. You can also control it remotely via the *MobileControl* program.

You can switch off the Remote control setting if you do not want to operate the dryer with your mobile device.

If Remote control is not switched on, the app can cause the program to be cancelled.

Use the “delay start” button to set a time by which you wish to start the dryer and start the delay start (see “Delay start/SmartStart”). The tumble dryer will then start within the timeframe specified when it receives your signal. If it has not received a start signal from the energy supplier by the latest start time set, the tumble dryer will start automatically.

Remote control is switched on in the factory setting.

## SmartGrid

The Remote control setting is only visible if the Miele@home setting is set up and activated.

This function can be used for starting your tumble dryer automatically at a time when your energy costs are most economical.

Activating SmartGrid gives the *delay start* button a new function. You set the SmartGrid via the “delay start” button. The tumble dryer will then start within the timeframe specified when it receives a signal from the energy supplier. If it has not received a signal from the energy supplier by the latest start time set, the tumble dryer will start automatically (see “Delay start”). Please check with your local utility provider for availability.

The SmartGrid function is switched off in the factory setting.





**Canada**  
**Importer**  
**Miele Limited**

**Headquarters and Miele Centre**

161 Four Valley Drive  
Vaughan, ON L4K 4V8  
[www.miele.ca](http://www.miele.ca)

**Customer Care Centre**

Phone: 800-565-6435  
[customercare@miele.ca](mailto:customercare@miele.ca)

**Germany**  
**Manufacturer**

Miele & Cie. KG  
Carl-Miele-Straße 29  
33332 Gütersloh

TWF 160 WP

en-CA

M.-Nr. 10 671 150 / 06